 
 
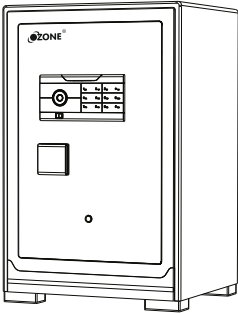 


OPERATING MANUAL
HAWK
OS-JS-90 BROWN

HAWK
OS-JS-90 BROWN
Color- Brown




FEATURES



OPERATING INSTRUCTION FOR HAWK SAFE

The ozone HAWK safe is designed to help you valuables against theft.
Please install the safe on the wall or floor, and do not keep the emergency key in the safe Place.

- 1) LED Display
- 2) Emergency Power Hole
- 3) Fingerprint Scanner
- 4) Button
- 5) Key Hole
- 6) Handle
- 7) Emergency Key Hole

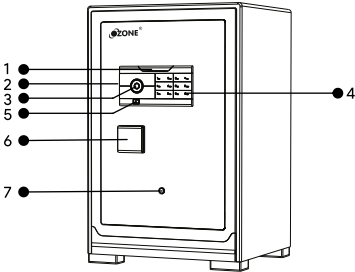

Accessories include:


- 1) 2 Main Keys
- 2) 2 Emergency Key
- 3) 4x1.5V AA Batteries
- 4) Floor Carpet
- 5) Warranty Card

Specifications:


Model	External Size (HxWxD)mm	Weight (Kg.)	Volume (Ltr.)
OS-JS-90 BROWN	725x468x399	97	90

Note: 1) Kindly change the password and fingerprint before operating the digital safe.
2) Please do not keep the emergency key.


HOW TO OPEN SAFE FOR THE FIRST TIME

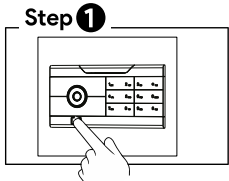


Remove the key cover

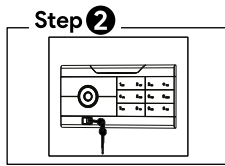


Insert the main key into the key hole

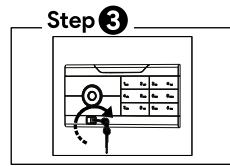


Turn the key clockwise

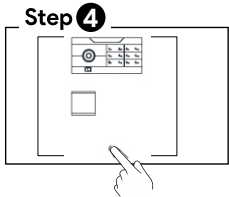

Remove the key cover

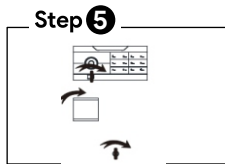


Insert the emergency key into the key hole

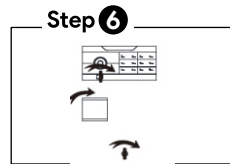


Turn the key Anti-clockwise & rotate the handle clockwise to open the door


TO LOCK THE SAFE

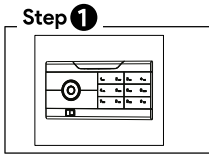

Close the door

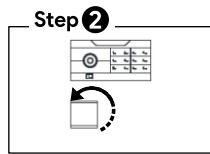

Rotate the handle anti-clockwise

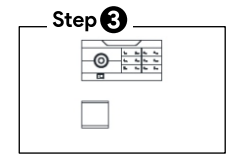


Now the safe is closed

Note: Please rotate the handle clockwise to check whether the safe is locked or not .

INSTALLING THE BATTERIES

Open the safe door, remove the battery case cover and insert new battery (4x1.5V AA) according to '+' '-' polarity.


Low Battery Indication- If the display will show in that condition we need to change the battery.

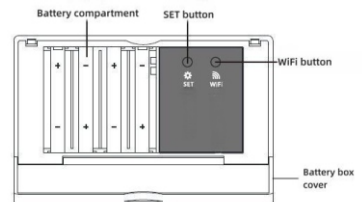

HOW TO CHANGE THE PASSWORD

Existing user password is (168 or 88888888).


- The safe door must be in open position.
- Press the reset button given inside of the door the buzzer will beep.
- Enter your new password (3-8 digits) and press “#” button to confirm, the password has been changed successfully.

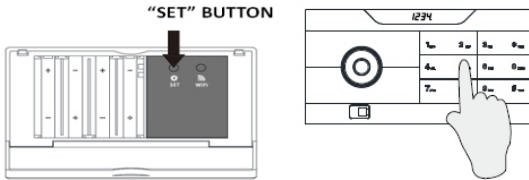

Note: Please check the password before closing the door.

HOW TO SET THE FINGERPRINT

- The safe door must be in open position.
- Press the reset button given inside of the door the buzzer will beep.
- Put your finger on the sensor and repeat 3 times that the finger has been set successfully.

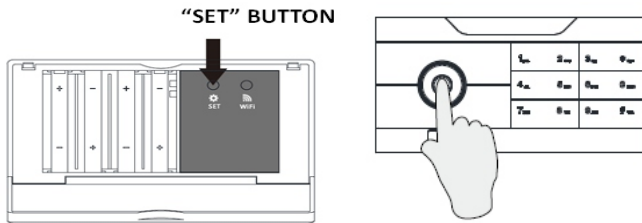

Note: Please check the finger before closing the door.

DELETE PASSWORD & FINGERPRINT

Press the “SET” button for 5 seconds to delete all password and fingerprint.

PASSWORD HIDING OPTION

When wake up the system, press the “*” to turn on the hidden state. after wake up the system, press “*” to turn off the hidden state.

SAFE MODE

You can change safe mode pressing the “wifi” button shortly. When you press the “Wifi” button shortly before, please make sure you add one password and one fingerprint at least.

ANTI-THEFT PASSWORD

You can enter the code 24 numbers at most, only include your correct code, and you can open the safe. For example, your code is 168, and you can enter xxxxxxxx168xxxxxxx (x means any numbers), you still can open your safe.


ALARM FUNCTION

Press the “*” for 5 seconds to turn on the alarming function. You can enter the correct password to turn off the alarm. When the alarm is off, you need to turn on the alarm function again. When you enter the wrong code three times, the system will alarm for 20 seconds and lock for 180 seconds.


MOBILE APP CONFIGURATION

- 1) Search for “OzoLife” in the app store or play store.
- 2) Register by mobile phone number / email id then log in.
- 3) Find the “OzoLife” app the “Smart safe” (Wifi) and follow the instruction to finish adding the safe.
- 4) Net connecting
- 5) Entering the wifi setting menu (wifi name and password)
- 6) Press reset button for 5 second safe is going pairing mode.
- 7) Hold 30 second to connect successfully. if you fail operate again.


MOBILE APP

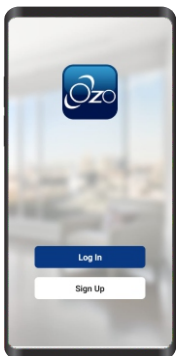


Sign Up

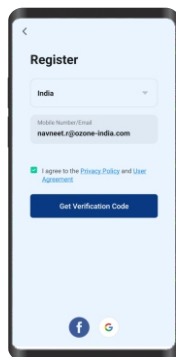


Enter mobile or mail
Get Verification Code

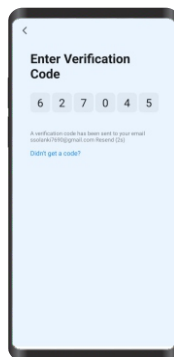

Enter the code sent
to your mail or mobile

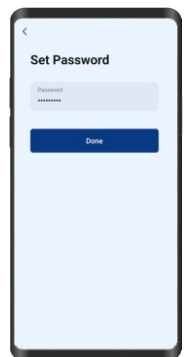


Set password
and login

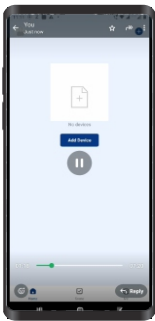

Add Device




Please select the "Lock (WiFi)" option from the "Digital Locks" menu.

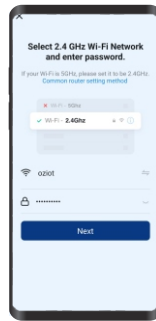

Please type in the Wi-Fi password and click on the 'Next' button to proceed.




Please confirm the indicator is blinking rapidly then press "click"

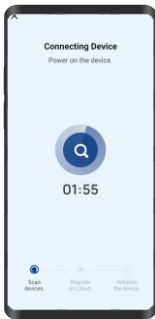

Please perform a scan on the device.



"The device has been added successfully."

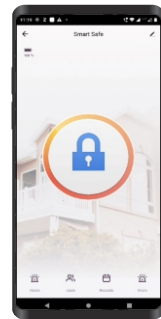


The interface has the ability to edit the name of the lock.

HOW TO REMOTE UNLOCK SAFE BY APP


Press "00#" and you will get a notification of remote unlock in the "OzoLife" app. Click on the remote "Open lock", the safe will open, and after opening the safe, you will get an open door message from the app.



Press click button

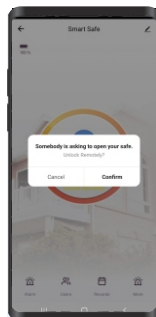




Then confirm

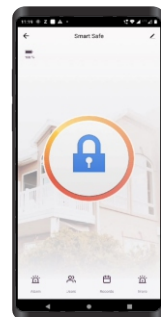

Lock open automatically

INSTALLING THE SAFE

- Check the type of location where the safe will be installed (wood, concrete, tiles)
- Get the appropriate anchors for the type of location
- Check location on floor for concealed wires or pipes
- Mark the location to drill for your anchor
- Drill the appropriate size hole for the anchors you have
- Mount the safe, making sure it is secure
- **Do not** mount to a shelf in a cabinet or closet without anchoring to wall behind the safe

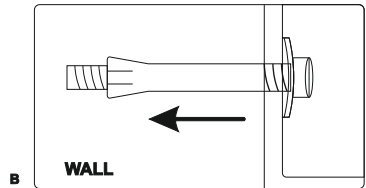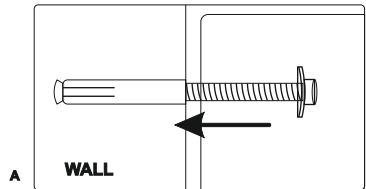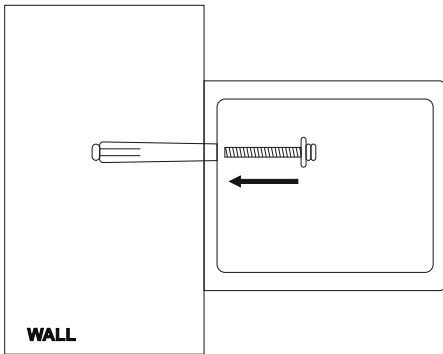

Do's	Don'ts
1) Check the area before installing the safe	1) Do not install the safe in moiser area
2) While installing the battery, make sure all the battery are new and are of branded company.	2) While installing new battery, make sure old and new battery are not mixed
3) Keep the emergency key in a secured place	3) Do not keep the emergency key inside the Safe



OZONE DIGITAL SAFE- CHECK LIST

MODEL NO.: _____ **SERIAL NO.:** _____

DATE: _____ **DATE OF DELIVERY:** _____

CONTENTS:-

- | | |
|--------------------------|--------------------------|
| 1. EMERGENCY KEY | ☐ |
| 2. PANEL KEY | ☐ |
| 3. DRAWER KEY | ☐ |
| 4. BATTERIES | ☐ |
| 5. ADAPTOR | ☐ |
| 6. RFID CARD | ☐ |
| 7. FASTNER | ☐ |
| 8. MANUAL | ☐ |
| 9. OPERATION CHECK | ☐ |
| 10. BODY DAMAGE (IF ANY) | ☐ |

INSPECTED BY :- _____

CUSTOMER / DEALER SIGNATURE & SEAL