

SECUREASY

ULTIMATE SECURITY. UNMATCHED EASE.

VIDEO DOOR BELL

USER MANUAL



KEY FEATURES



Wire-Free
Installation



PIR Motion Sensor,
Instant & Accurate
Alerts



Two-Way
Communication



FHD 1080p
Camera



Google Nest/
Alexa

DOWNLOAD NOW



Available on the App Store



GET IT ON Google Play



INDEX

1. Product Introduction

Description

2. Installation

What's in the box

Connection


QR code configuration

Settings

3. Function

4. FAQs

5. Guarantee

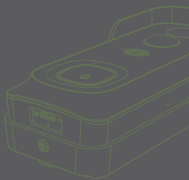



SMART. SECURE. SIMPLE.

Keep an eye on what's happening around your house from anywhere, anytime. Presenting smart video door bells from Ozone. Featuring remote access and cutting-edge 2-way communication, the stylish door bells come equipped with advanced motion sensors that provide you with instant and accurate alerts on your mobile devices. What's more, the smart security entrance device is compatible with Android/ iOS and Google Nest/ Alexa for better ease and accessibility.

INTRODUCTION



INSTALLATION

FUNCTION

FAQ

GUARANTEE

DESCRIPTION

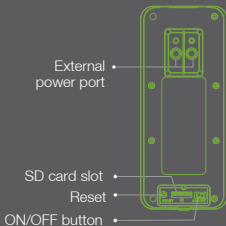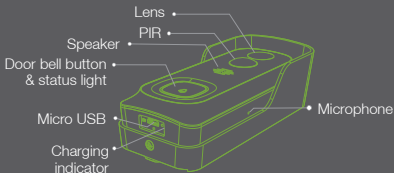

DESCRIPTION

POWER DC 5V/1A (Battery); AC 12~24V (AC supply)

DOOR BELL BUTTON Press the button to activate the door bell

STATUS LIGHT

- Solid red light on: network is malfunctional
- Blinking red light: waiting for network connection (slowly)
Connecting to the network (fast)
- Solid blue light on: camera is working correctly

MICROPHONE Capture sound for your video

SD CARD SLOT Support local SD Card storage (Max.128GB)

 
RESET Press and hold the pin for 5 seconds to reset the door bell

CHARGING INDICATOR

- Red indicator solids on: Battery is charging
- Blue indicator solids on: Fully charged

INSTALLATION

MODE 1 BATTERY INSTALLATION



Mark the position
of the screws



Nail expansion
screws



Fix the mounting bracket
with screws or tape (No
need of screws while
using installation tape)



 
Install the door bell
into the bracket



Tighten
the screw

INSTALLATION


MODE 1 AC INSTALLATION



Mark the position
of the screws



 Nail expansion
screws



Tighten the screw
using the screwdriver



Fix the mounting bracket with
screws or tape (No need of screws
while using installation tape)



Install the door bell
into the bracket



Tighten
the screw

WHAT'S IN THE BOX

CONSULT THE CHECKLIST BELOW FOR ALL COMPONENTS



VIDEO DOORBELL



POWER ADAPTER



USB CABLE



DOUBLE-SIDED TAPE

WHAT'S IN THE BOX



MANUAL



SCREWDRIVER



SCREWS (3 KINDS)



N/C PLATE

CONNECTION

DOWNLOAD

OzoLife is available for both iOS and Android OS. Search the name 'OzoLife', in App Store or Google Play or scan the QR-Code to download the App. You can select the App according to your need.

SUPPORTS



iPad



iOS



Android



Download App (iOS & Android)

CONNECTION

SET UP ROUTER

The router only supports 2.4GHz Wi-Fi (doesn't support 5GHz). Please set the parameters of the router before connecting to the Wi-Fi network, and record the SSID and password of your Wi-Fi.



Please keep network available

2.4GHZ





5GHZ



REGISTRATION PROCESS

STEP 1

Open the Ozolife App, click "Sign Up", read the "User Agreement Privacy Policy" and click "Agree".

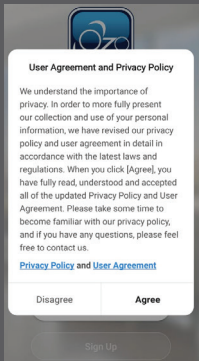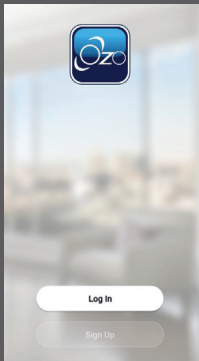

STEP 2

Input a legal and valid mobile number or email address and click "Get Verification Code". Input the verification code to log in.

Register

India

Email



Get Verification Code

Verification Code

Verification code has been sent to: admin@gmail.com,
Resend (56s)



QR CODE CONFIGURATION

- 1 Open the OzoLife App. Click "Me" >> "Home Management" >> "Create a home". You can then customize the home name and related settings.

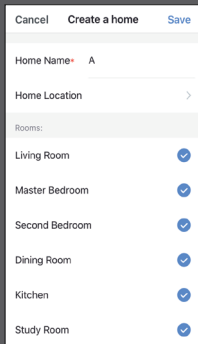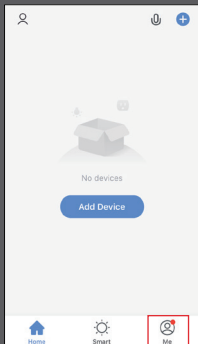



QR CODE CONFIGURATION

- 2 Click "Add Device" or "+", and then select "Video Surveillance" >> "Smart Doorbell" to add camera.

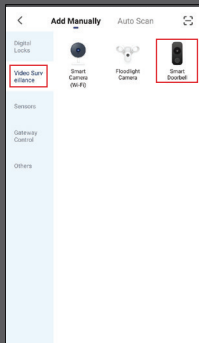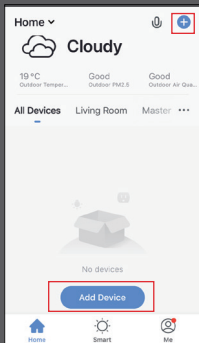

QR CODE CONFIGURATION

- 3 Switch on and reset the camera until the status indicator starts flashing quickly or a prompt tone is heard, and then click "Next". Then input your WiFi's password and click "Next". Click " " to change network.

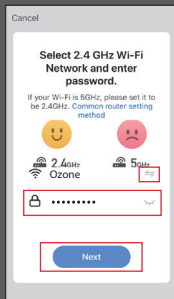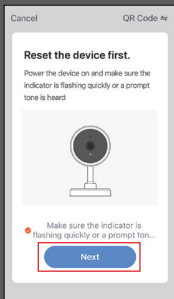


Note:

- 1) Camera only supports 2.4GHz WiFi network.
- 2) The number of bits in the SSID and password of the router should not exceed 24 digits.



QR CODE CONFIGURATION

- 4 In this interface, you should scan the QR code in your phone with the camera, when the camera comes out "dong dong dong". And you can complete the configuration in about 30s.

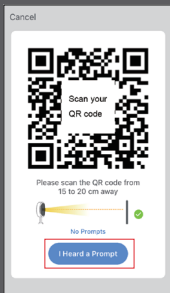



QR CODE CONFIGURATION

- 5 When connecting, you should make sure your router, mobile and camera are as close as possible. When camera is added successfully, click "Done". You can also customize the camera's name.

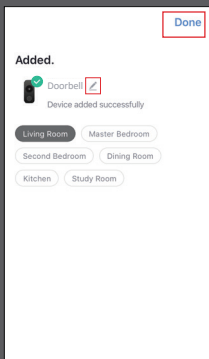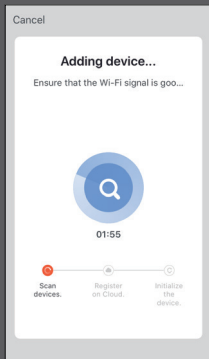

SETTING

In the "Smart Camera" interface, click () to set the common camera functions.

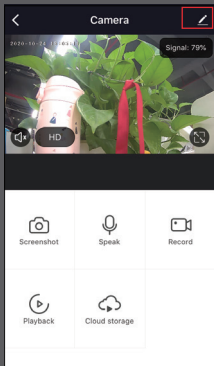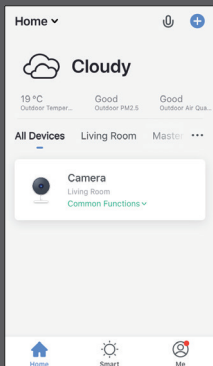

FUNCTION

REMOTE WAKE-UP

The camera will be in a sleep mode to save power; you can have a preview in the App.

FULL-DUPLEX AUDIO

You can see and hear conversations on the App through the camera.

PIR

When the camera detects someone stopping by, it sends an alarm message to your mobile phone.

LOW BATTERY ALARM

You can set a low-battery alarm threshold in your phone App. The threshold is set to a minimum of 10% and a maximum of 50%. When the battery power of the camera becomes lower than the set threshold, the App instantly sends a reminder.

RECORD

Records every movement on the SD card or on the Cloud Storage Service.

DAY & NIGHT

Powerful night vision means no interruptions, even in complete darkness.

FUNCTION

DAY



NIGHT



Q: The device cannot be previewed properly?

A: Check whether the device is connected to the network. Place the device close to the router, and if it is still not working, reset the device and add it again.

Q: Why is it still in the list of devices after resetting?

A: The reset button only resets the network configuration of the device, but cannot change the configuration on the App. To remove the device, it must be deleted from the App manually.

Q: How to move the camera network to another router?

A: First remove and reset the device on the App and then configure the device again using the App.

Q: Why doesn't the device identify the SD card?

A: It is recommended to plug in the SD card after a power cut. Confirm whether the SD card is normally available and is in FAT32 format. The TF card can't be identified when the internet connection is fluctuating.

Q: Why I can't get the notifications on my mobile App?

A: Please confirm that the App has been running on the phone, and the relevant reminder function has been opened; message notification and authority confirmation in the mobile phone system have been opened.

WARRANTY

Customer Name:

Customer Contact No.:

Purchase Date:

Product Name:

Product Serial No:

Signature/ Dealer stamp:

Note:

1. Please keep this card handy with you, whenever you need warranty service.
2. One-year warranty from the date of purchase, is provided by us.
3. This warranty service is valid for customers in any country across the world.

Special Instructions:

- Please recharge the battery as soon as the low wattage alarm signals it.
- Read this manual carefully before installation and keep it safe, for future reference.

