

Special function description

1>Decode: When password been forgotten, you can get the decode number by providing the code on the lock body to the company (customer care) the password will be changed to the original "1234" and "4321" ; Or use the pin to press the reset hole at least 3 seconds, lock will be back to factory default.

2>Auto-alarm will be activated when input wrong password 4 times and the lock will be died for 60sec.

3>Battery low voltage prompts: When the buzzer give out three sounds beep... and the green indicator light is on mean battery at low voltage, please place the battery on time, the lock may not work when the voltage is low.

4>Emergency power supply: when the battery is in low voltage condition, you can connect the USB port with an external power supply.

Troubleshooting



- When the product is not performing normally
- Please check following conditions below and follow troubleshooting procedures
- If the same problem occur please contact customer service center

Problem	Primary cause	Way to solve the problem
When input the password, alarm beep... 3 times , lock can not be opened	Too low voltage	Replace the batteries
When input the password, alarm beep.1 time and the green light is on, lock can not be opened.	The latch is still in the lock body	Adjust the position of the lock body
Touch button without sound, lock can be opened	Buzzer broken	Change the buzzer.

Fixing hole size & installation

▼ Fixing hole size Unit:mm ▶ Installation


* Suitable thickness :
5~24mm

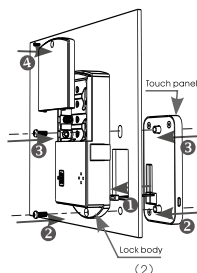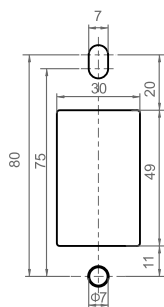

Packing List

S/N	Description	Quantity	Remark
1	Front panel lock	1	
2	Back panel lock	1	
3	Countersunk screws packet	1	
4	User Installation manual	1	

SMART DIGITAL FURNITURE LOCK

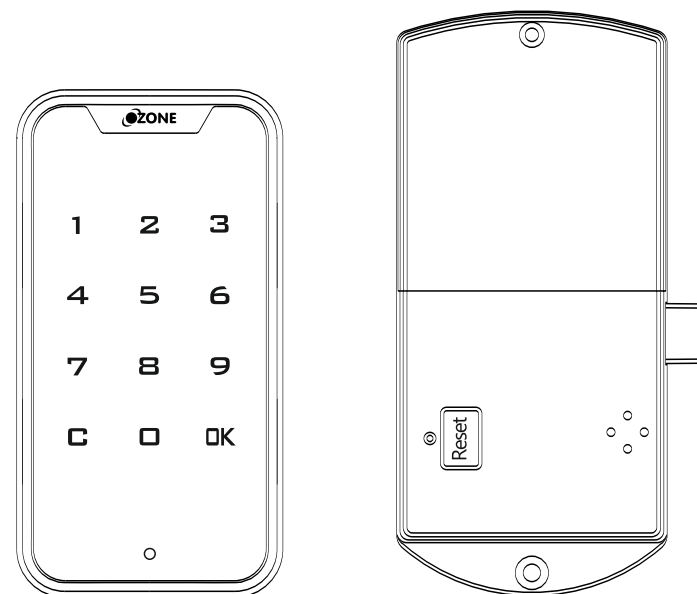


OZFL-201PW



Ozone Secutech Pvt. Ltd.


548, Phase V, Udyog Vihar, Gurugram, Haryana-122016, India
Visit : www.ozonesecutech.com | Email : ccsafes@ozone-india.com
India Customer Care : +91-11-45576666

Product Introduction

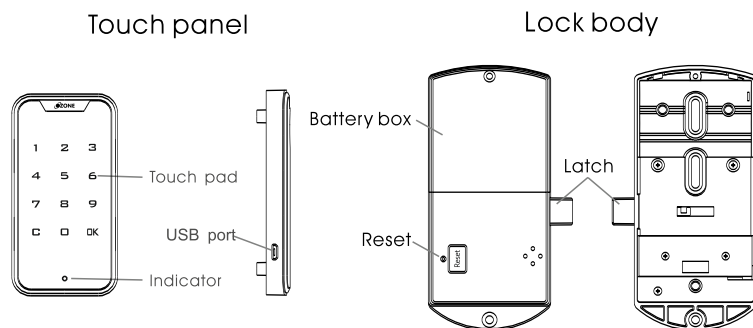

How to operate

Lock & unlock

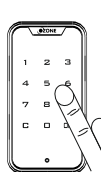


Unlock

- 1> Input factory default user password "1234+OK" or input factory default management password "4321+OK"
- 2> Buzzer gives out a long beep... sound, the green indicator light is on.

★ NOTE:

- When password is wrong alarming sound beep... 3 times.
- When buzzer gives out sound beep... 3 times and the green indicator light is on means low voltage.

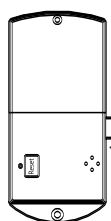


Lock

- The latch will stretch out automatically after 5sec.

Setting

1.Change password

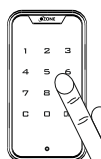

- 1> Input factory default user password "1234+C" or input factory default management password "4321+C" Buzzer gives out a long beep... sound, the green indicator light will flash quickly.
- 2> Input new password, press OK, when you heard a long beep... sound means password already been changed.

2.Turn on public mode, set temporary password



Turn on public mode

- 1> Input management password +OK, buzzer gives out a long beep... sound, the green indicator light is on.
- 2> Press OK at least 2sec, the green indicator light flash
- 3> Input "44", press OK, when you heard a long beep... sound means public mode already been set.

Set temporary password

- 1> Input the new password consisted of 4-15 digits
- 2> Press OK, when you heard a long beep... sound, the green indicator light is on, temporary password already been set.

★ NOTE:

- Temporary password can be used for 1 time only.

3.Turn off public mode



- 1> Input management password +OK, buzzer gives out a long beep... sound, the green indicator light is on.
- 2> Press OK at least 2s, the green indicator light flash
- 3> Input "43", press OK, when you heard a long beep... sound means public mode already been turned off

4.Turn on/off Fake Pin code function



- 1> Input management password +OK, buzzer gives out a long beep... sound, the green indicator light is on.
- 2> Press OK at least 2s, the green indicator light flash
- 3> Input "42+OK", when you heard a long beep... sound means Fake Pin code function already been turned on.
Input "41+OK", when you heard a long beep... sound means Fake Pin code function already been turned off.

★ NOTE:

Introduced with Anti-Theft Technology and Fake PIN password function you can input any code(s) before or after the real password to prevent the real password being beeped. Maximum 16 digits.