

► Manner mode/audio mode

- Press OK, release OK when the green indicator light flash one time, manner mode is set up successfully.
- Press OK, release OK when the green indicator light flash one time, audio mode is set up successfully.

Special function description

1> Decode

When password been forgotten, you can get the decode number by providing the code on the lock body to the distributor, the password will be changed to the original "1234" and "4321"; Or use the pin to press the RST (reset) hole at least 3 seconds, lock will be back to factory default.

2> Auto-alarm will be activated when input wrong password 4 times and the lock will be died for 60sec.

3> Battery low voltage prompts


When the buzzer give out three sounds beep... and the green indicator light is on mean battery at low voltage, please place the battery in time, the lock may not work when the voltage is low.

4> Emergency power supply

when the battery is in low voltage condition, you can connect the USB port with an external power supply.

Fixing hole size & installation

▼ Fixing hole size Unit: mm

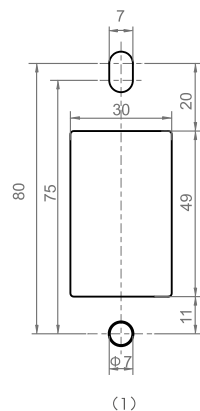


Packing List


S/N	Description	Quantity	Remark
1	Front panel lock	1	
2	Back panel lock	1	
4	Countersunk screws packet	1	
5	User Installation manual	1	

▼ Installation

* Suitable thickness :
5-24mm

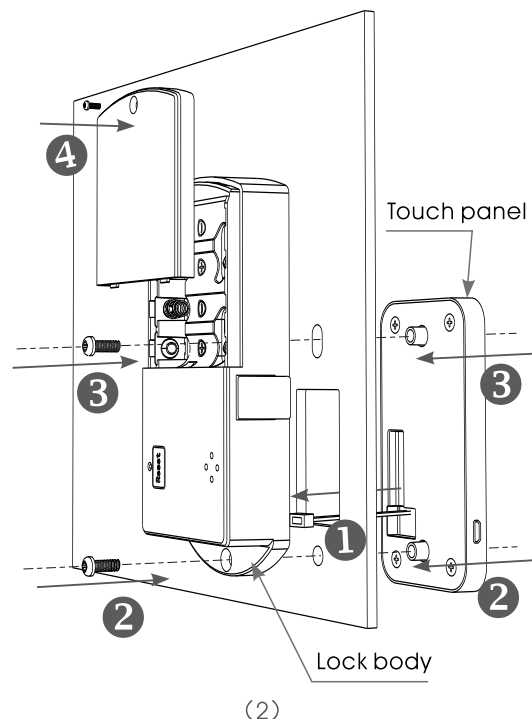

SMART DIGITAL FURNITURE LOCK

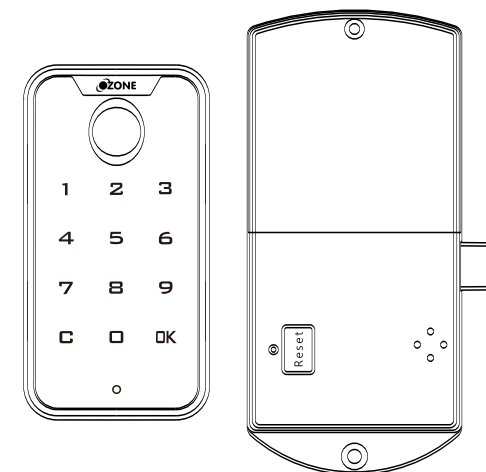


OZFL-203-PF



Ozone Secutech Pvt. Ltd.

548, Phase V, Udyog Vihar, Gurugram, Haryana-122016, India
Visit : www.ozonesecutech.com | Email : ccsafes@ozone-india.com
India Customer Care : +91-11-45576666

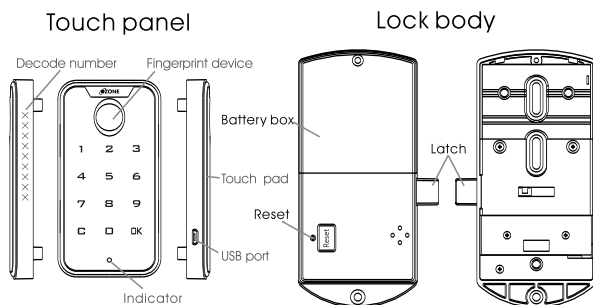


Technical parameters

Fingerprint device	Semiconductor fingerprint reader	Management fingerprint	2
Management password	4321	User fingerprint	8
User password	1234	Static current	30uA
Working temperature	-20 ~ +55°C	Dynamic current	130mA
Working humidity	10% ~ 85% RH	Batteries life time	1 year
Storage temperature	-40 ~ +55°C	Power supply	4 x AA batteries

How to operate

- 1> factory default user password 1234, factory default management password 4321
Factory default fingerprint database is empty, any fingerprint can open the lock under the private mode
- 2> This lock has 2 kinds of mode, one is private mode, and the other one is public mode. Under the public mode, it can only set up temporary password, can not set up temporary fingerprint. factory default mode is private mode

Lock & unlock

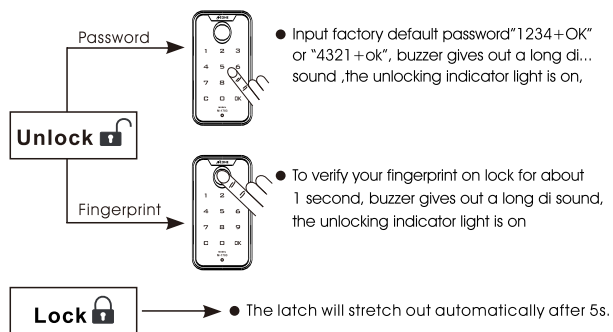

Note:

- wrong: Buzzer gives out beep... sound,
- Buzzer gives out beep... sound, and the green light is on, mean too low voltage
- After using the management password to unlock, the user password will be changed back to 1234

How to set

Change password

- 1> Input current password "1234+C", or "4321+C", Buzzer gives out a long beep... sound, the green light will flash quickly
- 2> Input new password, press OK, when you heard a long beep... sound means password already been changed

Note:

- Password can be consisted of 4-15 digits
- Management password and user password can not be the same.

How to set fingerprint

How to add the management fingerprint

- 1> Input correct management password "****+C", when you heard a long beep... sound, the green light will flash quickly
- 2> To put the fingerprint on the lock for 5 times, each time you will hear a short beep... sound means inputting fingerprint succeed, if you hear three short beep... sound, means failed. Then change position of fingerprint and press 5 times successfully, a long beep... sound alarm, means setting management fingerprint succeed. (2 at most)

Note:

- Management fingerprint have add and delete user fingerprint function
- Under public mode, management fingerprint can also delete the temporary password.

How to add the user fingerprint

- 1> To put the management fingerprint on the lock for about 1sec, you will hear a long beep... sound with green light on
- 2> Again put the management fingerprint on the lock for about 1sec, you will hear a long beep... sound with green light flash, now you are ready to add user fingerprint
- 3> To put the user fingerprint on the lock for 5 times, each time you will hear a short beep... sound means management fingerprint setting succeed, if you hear three short beep... sound, means failed. Then change position of fingerprint and press 5 times, a long beep... sound alarm, means succeed. (8 at most)

Note:

- Under the public mode, user fingerprint is unworkable.
- Management fingerprint and user fingerprint can not be the same.

How to delete all fingerprint

- 1> to put the management fingerprint on the lock, when you heard a long beep... sound, the green indicator light is on
- 2> again put the management fingerprint on the lock, when you heard a long beep... sound, the green indicator light is flash slowly.
- 3> put the management fingerprint on the lock third time, when you heard a long beep... sound, the green indicator light is flash quickly, now you are ready to delete the fingerprint
- 4> input "000+ok", when you heard a long beep... sound, delete succeed

Turn on public mode, set temporary password

Turn on public mode

- 1> Input management password + OK, buzzer gives out a long beep... sound, the green indicator light is on.
- 2> Press OK at least 2s, the green indicator light flash
- 3> Input "44", press OK, when you heard a long beep... sound means public mode already been set.

Set temporary password

- 1> Input the new password consisted of 4-15 digits
- 2> Press OK, when you heard a long beep... sound, the green indicator light is on, temporary password already been set.

Note:

- Temporary password can be used for 1 time only.

Turn off public mode

- 1> Input management password + OK, buzzer gives out a long beep... sound, the green indicator light is on.
- 2> Press OK at least 2s, the green indicator light flash
- 3> Input "43", press OK, when you heard a long beep... sound means public mode already been turned off


Turn on/off Fake Pin code function

- 1> Input management password + OK, buzzer gives out a long beep... sound, the green indicator light is on.
- 2> Press OK at least 2s, the green indicator light flash
- 3> Input "42+OK", when you heard a long beep... sound means Fake Pin code function already been turned on.
Input "41+OK", when you heard a long beep... sound means Fake Pin code function already been turned off.

Note:

- Introduced with Anti-Theft Technology and Fake PIN password function you can input any code(s) before or after the real password to prevent the real password being peeped. Maximum 16 digits.

How to reset

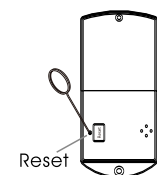

- Put the pin into the RST (reset) hole, release the pin when you hear the long sound of beep... the lock already reset. The fingerprint database is empty. Lock mode is private mode. Management password change back to 4321, user password change back to 1234.