

Features

1) Decode

When password been forgotten, you can get the decoded number by providing the code on the lock body to the company (customer care) to decode. The password will be changed back to the original management password "4321", user password"1234". Or, put the pin into the RST (reset) hole, release the pin when you hear the long sound of beep... the lock already reset.

2) Introduced with Anti-Theft Technology and Fake PIN password

Function; you can input any code(s) before or after the real password To prevent the real password being beeped. Maximum 16 digits

3) Auto-alarm will be activated when input wrong password 4 times

And the lock will be freezed for 60 seconds.

4) Automatic power shortage prompts (When lock show this signal).

The lock cannot be operated when the voltage is very low

5) Equipped with 2 pcs of AAA batteries, the last password will not be lost after changing the battery.



Troubleshooting

- When the product is not performing normally
- Please check following conditions below and follow troubleshooting procedures
- If the same problem occur please contact customer service center

 
 
Problem	Primary cause	Way to solve the Problem
When input the password, alarm twice beep... meanwhile  blink two times 	Too low voltage	Replace batteries
When input the password, alarm beep... meanwhile signal  is on, lock cannot be open	Knob is not at the right position	Turn knob to the right position
Touch button without sound, lock can be opened	Buzzer broken	Change buzzer

Fixing hole size & installation

- ▼ fixing hole size for wooden panel ▼ installation for wooden panel

Unit : mm


* suitable thickness:16~20mm

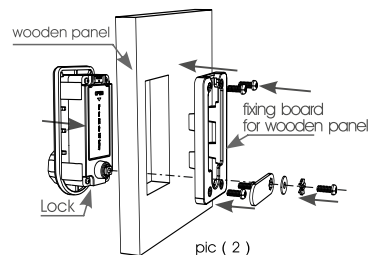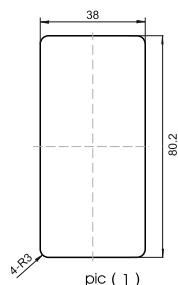

Ozone Secutech Pvt. Ltd.


548, Phase V, Udyog Vihar, Gurugram, Haryana-122016, India
Visit : www.ozonesecutech.com | Email : ccsafes@ozone-india.com
India Customer Care : +91-11-45576666

 SMART DIGITAL FURNITURE LOCK

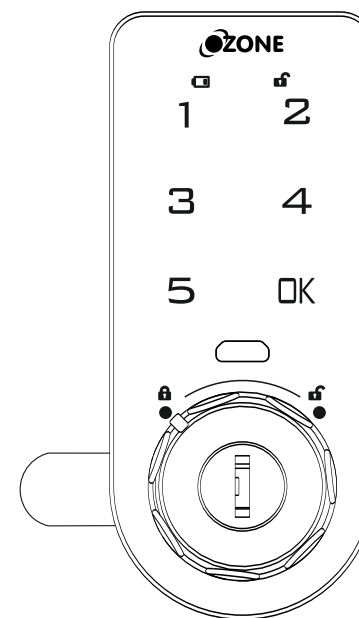

OZFL-301V-PK

 -  Low voltage indicator light
-  Unlocking Indicator light

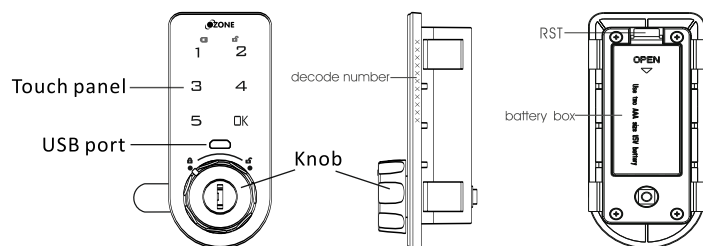

How to operate

Unlocking

1. Input factory default user password 1234+OK or Input factory default management password 4321+OK
2. Buzzer gives out a long beep... sound
3. When the green indicator light is on, rotate the knob to 90 Degree within 3 seconds to open the lock
When password is wrong alarming sound beep... 3 times.
When lock shows this signal  means low voltage
Pls note that after using management password the user password will be back to 1234.

Locking:

Rotate back the knob to 90 degree to lock position

Setting

Change password

1. Input factory default user password 1234+OK or input factory default management password 4321+OK, Buzzer gives out a long beep... sound, the unlocking indicator light Will be on.
2. Press OK at least 2 seconds, unlocking indicator light blink
3. Input new password, press OK, when you heard a long beep... Sound means password already been changed.
Password can be consisted of 4-15 digits, please note that the management password can not be the same as user password

Turn on public mode, set temporary password

Turn on public mode

1. Input management password + OK, buzzer gives out a long beep... sound, unlocking indicator light is on.
2. Press OK at least 2 seconds, unlocking indicator light blink, press OK again.
3. Input 4 4, press OK, when you heard a long beep... sound means public mode already been set.

Set temporary password

1. Press OK. Unlocking indicator light will blink
2. Input the new password consisted of 4-15 digits
3. Press OK, hear a long beep... unlocking indicator light is on, temporary password already been set
Temporary password can be used for 1 time only
 will blink every three second when the temporary password is valid.

Turn off public mode

1. Input management password + OK, buzzer gives out a long beep... sound, unlocking indicator light is on.
2. Press OK at least 2 seconds, unlocking indicator light blink press OK again
3. Input 4 3, press OK, when you heard a long beep... sound means public mode already been turned off.

Turn on/off Fake Pin code function

1. Input management password + OK, buzzer gives out a long beep... sound, unlocking indicator light is on .
2. Press OK for atleast 2 seconds, unlocking indicator light blink, press OK again.
3. Input 4 2, press OK, when you heard a long beep... sound means Fake Pin code mode already been turned on.
4. Input 4 1, press OK, when you heard a long beep... sound means Fake Pin code mode already been turned off.
Introduced with Anti-Theft Technology and Fake PIN password function; you can input any code(s) before or after the real password to prevent the real password being peeped. Maximum 16 digits.

Packing List

S/N	Description	Quantity	Remark
1	Front panel lock	1	
3	Cam	1	
4	Key	1	
5	Countersunk screws packet	1	
6	User Installation manual	1	