

Features

1) Decode

When the password has been forgotten, you can use the pin to press the RST (reset) button on the battery case or get the decoded number by providing the code on the lock body to the company (customer care) to decode. The password will be changed back to the original management password "4321", user password "1234"


- 2) Introduced with Anti-Theft Technology and Fake PIN password function; you can input any code(s) before or after the real password to prevent the real password being peeped. Maximum 16 digits
- 3) Auto-alarm will be activated when input wrong password 4 times and the lock will freeze for 60 seconds.
- 4) Automatic power shortage prompts (When lock shows this signal ). The lock cannot be operated when the voltage is very low
- 5) Equipped with 3 pcs of AAA batteries, the last password will not be lost after changing the battery.

Troubleshooting

- When the product is not performing normally
- Please check following conditions below and follow troubleshooting procedures
- If the same problem occur please contact customer service center

Problem	Primary cause	Way to solve the Problem
When input the password, alarm twice beep... meanwhile  blink two times	Too low voltage	Replace batteries
When input the password, alarm beep... meanwhile signal  is on, lock cannot be opened	Knob is not at the right position	Turn knob to the right position
Touch button without sound, lock can be opened	Buzzer broken	Change buzzer


Fixing hole size & installation

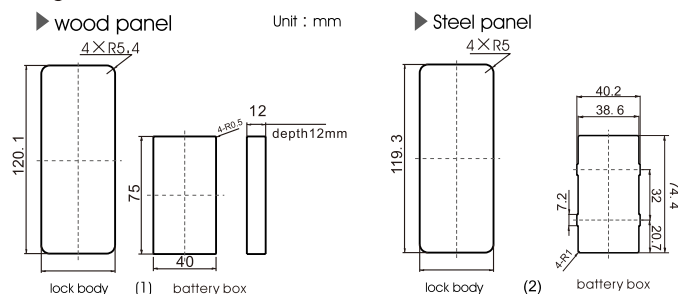

Ozone Secutech Pvt. Ltd.

548, Phase V, Udyog Vihar, Gurugram, Haryana-122016, India
Visit : www.ozone-secutech.com | Email : ccsafes@ozone-india.com
India Customer Care : +91-11-45576666

SMART DIGITAL FURNITURE LOCK

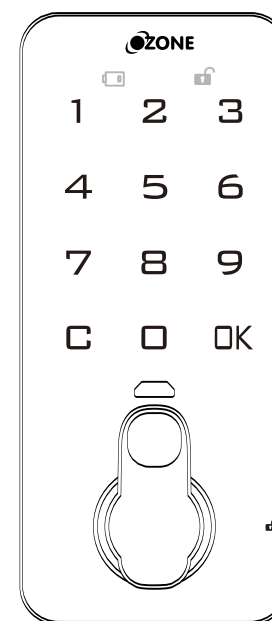


OZFL-101-PK

Packing List

S/N	Description	Quantity	Remark
1	Front panel lock	1	
2	Back panel lock		
3	Cam	1	
4	Key	1	
5	Countersunk screws packet	1	
6	User Installation manual	1	


► wood panel

* Suitable thickness(wood): 18~20mm
Suitable thickness(steel): 0.8~1.2mm

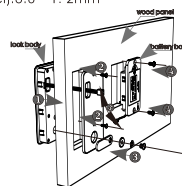


Low voltage inbeep...cator light

Unlocking Inbeep...cator light

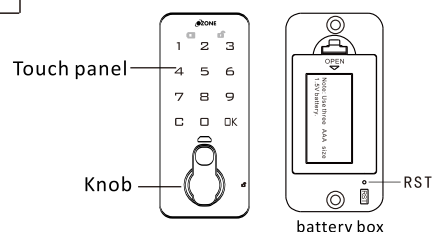

How to operate

 Unlocking



1. Input factory default user password 1234+OK
or Input factory default management password 4321+OK

2. Buzzer gives out a long beep... sound

3. When the green indicator light is on, rotate the knob to 90 degree within 3 seconds to open the lock

When password is wrong alarming sound beep... 3 times.
When lock shows this signal means low voltage

 
Please note that after using management password
the user password will be back to 1234.

Locking:

Rotate back the knob to 90 degree to lock position

Setting

Change password



1. Input factory default user password 1234+C or input
factory default management password 4321+C, Buzzer
gives out a long beep... sound, the unlocking indicator
light will be on.

2. Press new password, then press OK, when you heard
A long beep... sound means password already been changed.

Password can be consisted of 4-15 digit please note that the
management password can not be the same as user password

Turn on public mode, set temporary password

Turn on public mode

1. Input management password + OK, buzzer gives out a long beep... sound, unlocking indicator light is on.
2. Press OK at least 2 seconds, unlocking indicator light blink
3. Input 4 4, press OK, when you heard a long beep... sound means public mode already been set.

Set temporary password

1. Press OK. Unlocking indicator light will blink
2. Input the new password consisted of 4-15 digits
3. Press OK, hear a long beep..., unlocking indicator light blink temporary password already been set
Temporary password can be used for 1 time only
 will blink every three second when the temporary password is valid.



Turn off public mode

1. Input management password + OK, buzzer gives out a long beep... sound, unlocking indicator light is on.
2. Press OK at least 2 seconds, unlocking indicator light blink
3. Input 4 3, press OK, when you heard a long beep... sound means public mode already been turned off.

Turn on/off Fake Pin code function

1. Input management password + OK, buzzer gives out a long beep... sound, unlocking indicator light is on .
 2. Press OK at least 2 seconds, unlocking indicator light blink,
 3. Input 4 2, press OK, when you heard a long beep... sound means Fake Pin code mode already been turned on.
 4. Input 4 1, press OK, when you heard a long beep... sound means Fake Pin code mode already been turned off.
- Introduced with Anti-Theft Technology and Fake PIN password function; you can input any code(s) before or after the real password to prevent the real password being peeped.
Maximum 16 digits

