

3. Features

Automatic power shortage prompts:


when lock show  means the battery is in low voltage, please replace the battery (Note: the lock may not work if the voltage is too low).

4. Fixing hole size & installation


► Fixing hole size

▼ Installation

Unit: mm

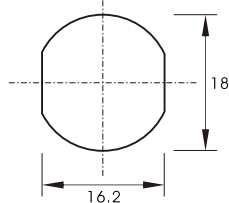

(1) Wood/Steel

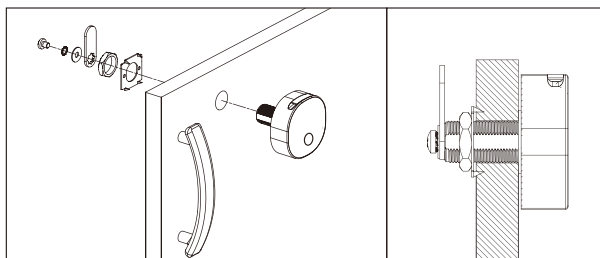


(2) Wood

Packing List

S/N	Description	Quantity	Remark
1	Front panel lock	1	
2	Cam	1	
3	Countersunk screws packet	3	
4	User Installation manual	1	

SMART DIGITAL FURNITURE LOCK

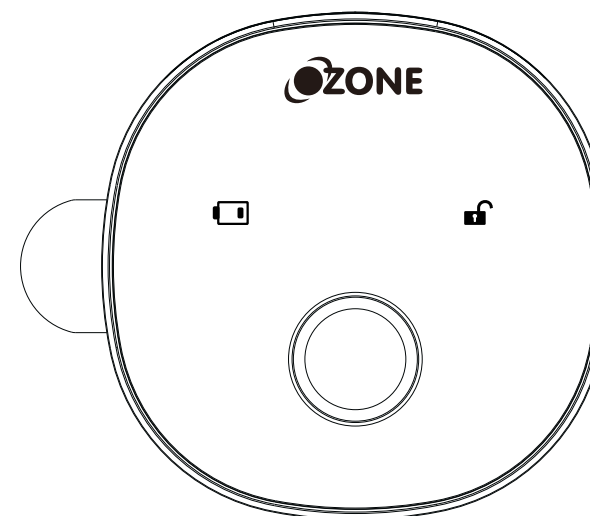

OZFL-402-F





Ozone Secutech Pvt. Ltd.

548, Phase V, Udyog Vihar, Gurugram, Haryana-122016, India
Visit : www.ozonesecutech.com | Email : ccsafes@ozone-india.com
India Customer Care : +91-11-45576666

Brief introduction

  - Low voltage indicator light
- Unlocking indicator light

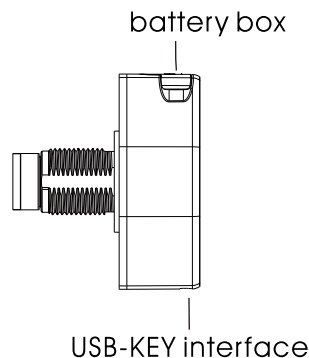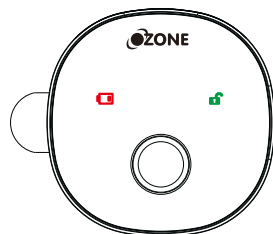


Technical parameters

Fingerprint device: Semiconductor fingerprint reader	Static current: 20uA
Management fingerprint: 2	Dynamic current: 30mA
User fingerprint: 8	Working temperature: -20 ~ +55°C
Power supply: CR2450	Working humidity: 10% ~ 85%
Batteries life time: upto 1 year	Storage temperature: -40 ~ +55°C

How to operate

1. Lock & unlock

Unlock

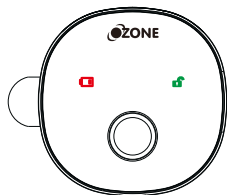

- To verify your fingerprint on lock for about 1 second, Buzzer gives out a long beep... sound, The unlocking indicator light is on
- Turn the knob within 3sec. to open the lock

Note:

- * Factory default fingerprint database is empty, any fingerprint can open the lock
- * Wrong: Buzzer gives out 3 times beep... sound
- * A Low voltage indicator light is on, means too low voltage

Lock

Rotate the knob to lock

2. How to set fingerprint

1. How to add the management fingerprint

- When the fingerprint database is empty, put the fingerprint on the lock for about 1sec, you will hear a long beep... sound with green light on; again put the management fingerprint on the lock for about 3sec, you will hear a long beep... sound with green light/flash, now you are ready to add management fingerprint.
- To put the management fingerprint on the lock for 4 times, you will hear a short beep... sound means inputting fingerprint succeed, if you hear three short beep... sound, means failed. Then change position of fingerprint and press 4 times successfully, a long beep... sound alarm, means setting management fingerprint succeed. (2 at most)

Note: Management fingerprint have add and delete user fingerprint function

2. How to add the user fingerprint

- Put the management fingerprint on the lock for about 1sec, you will hear a long beep... sound with green light on
- Again put the management fingerprint on the lock for about 1sec, you will hear a long beep... sound with green light flash, now you are ready to add user fingerprint
- To put the user fingerprint on the lock for 4 times, you will hear a short beep... sound means user fingerprint setting succeed, if you hear three short beep... sound, means failed. Then change position of fingerprint and press 4 times, a long beep... sound alarm, means succeed.(8 at most)

Note: After 2 management fingerprints added, the third fingerprint added will be user fingerprint

3. How to delete all user fingerprint

- To put the management fingerprint on the lock , you will hear a long beep... sound with the unlocking indicator light on
- Again put the management fingerprint on the lock , you will hear a long beep... sound with the unlocking indicator light flash
- Put the management fingerprint third time on the lock , you will hear a long beep... sound, now all user fingerprints were deleted

4. How to delete all fingerprint

- To put the management fingerprint on the lock , you will hear a long beep... sound with the unlocking indicator light on
- Again put the management fingerprint on the lock , you will hear a long beep... sound with the unlocking indicator light flash
- Put the management fingerprint third time on the lock , you will hear a long beep... sound, and again put the management fingerprint on the lock for 3sec. now all fingerprints were deleted