

OPERATING MANUAL FORT AB BIO LIFE SAFE




Fort AB Bio Life-78
Color- Black

FEATURES



OPERATING INSTRUCTIONS FOR FORT AB BIO LIFE SAFE

The ozone fort ab bio life safe is designed to help you protect your valuables against theft. Please install the safe in a cupboard or on a wall or floor, and keep the emergency key in a safe place.

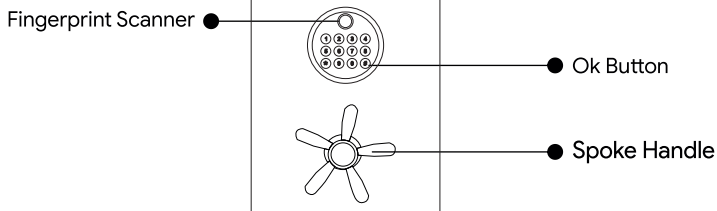

Accessories include:


- 1) 2 Keys
- 2) 4 Mounting Bolts
- 3) 1 x 9v Battery
- 4) Floor Carpet
- 5) 5 Spoke Handles
- 6) Warranty Card

Specifications:


Model	External Size (HxWxD)mm	Weight (Kg.)	Volume (Ltr.)
Fort AB Bio Life-78	555x460x360	64.34	78

Note: 1) Kindly change the user password and fingerprint before operating the digital safe.
2) Please do not keep the emergency key.


HOW TO OPEN SAFE FOR THE FIRST TIME

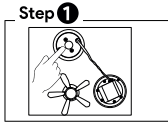

Remove the front panel

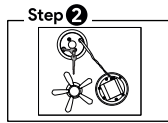

Insert the emergency key into the key hole

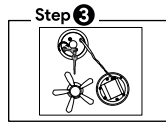


Turn the key clockwise



Rotate the handle clockwise and open the safe


TO LOCK THE SAFE

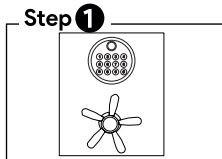

Close the door



Rotate the handle anti-clockwise

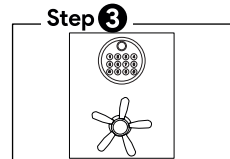

Now the safe is closed


Note: Please rotate the handle clockwise to check whether the safe is locked or not .

INSTALLING THE BATTERIES

Open the safe door, remove the battery case cover and insert new battery (9V) according to '+' '-' polarity.

Low Battery Indication - If the display will show "RED LIGHT" in that condition we need to change the battery.

Note: Wake up touch function: in the standby state, tap any key to wake up, and the key light then the next operation.

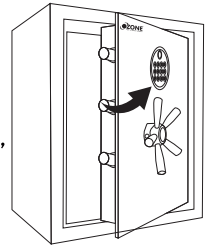

HOW TO CHANGE THE USER PASSWORD

Existing user password: 159.


The safe door must be in the open position. Press the reset button inside the door, the buzzer will sound. The yellow light is on, and then enter the 3-8-digit password and press the "*" key to confirm. The buzzer will ring long, and the yellow light will flash, indicating that the user password is set successfully.

HOW TO SET THE FINGERPRINT


The safe door must be in the open position. Press the reset button inside the door for 3-10 seconds, the buzzer will sound and the yellow light will be on. Place the fingerprint on the sensor at three different angles, and the yellow light will flash, which shows that the fingerprint has been set successfully.

NOTE: You can resist up to 100 fingerprints.

TO LOCK THE SAFE

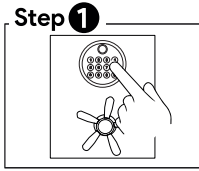


Close the door and hold it

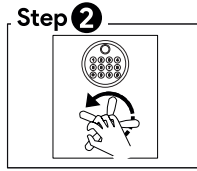


Rotate the handle anti-clockwise to close the door


TO OPEN THE SAFE

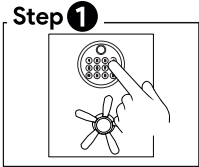

Touch the panel, enter the random password

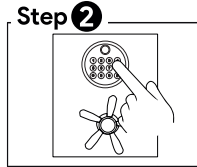

Enter your 4-8 digits password then press “#”

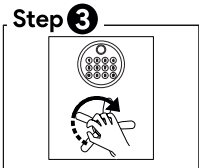

Rotate the handle clockwise and open the safe

MOBILE APP CONFIGURATION

- 1) Search for "ozolife" in the app store or play store.
- 2) Register by mobile phone number / email id then log in.
- 3) Find the "ozolife." app the "smart safe" (wi-fi) and follow the instructions to finish adding the safe.
- 4) Net connecting
- 5) Entering the wi-fi setting manu (wi-fi name and password)
- 6) Press reset button for 15 second safe is going pairing mode.
- 7) hold 30 Seconds to connect successfully. If you fail, operate again.

MOBILE APP CONFIGURATION

- 1) Open the ozolife app and click "smart safe."
- 2) Press the "lock icon" and press to confirm.
- 3) The safe opens automatically.
- 4) Input 3-time wrong password or fingerprint safe is activating auto freeze mode.

HOW TO REMOTE UNLOCK SAFE BY APP

Press “*11” and you will get a notification of remote unlock in the “ozolife” app. Click on the remote "open lock," the safe will open, and, after opening the safe, you will get an open door message from The app.

REMARKS

Make sure the route is a single-frequency signal. If it is a double-frequency router, first set the router to 2.4 ghz. Make sure the device is under wi-fi signal and the distance between the safe box and the router is as close as possible.

Under the new network environment, delete the device and reconfigure the network. The black wireless Module is easily broken; please carefully put it down.

OTHER FUNCTION

- 1) Remind box name and delete device.
- 2) Display battery volume.
- 3) Lock sign.
- 4) Display the last message.
- 5) Family member management.
- 6) All open door recording
- 7) Other functions.

Mute function: In the standby state, press 00* to start the silence mode and mute any operation.

Press 66* to restore normal sound.

Note: Automatically restore normal sound after power off.

Alarm activated: If you enter incorrect passwords three consecutive times for the first time, the system automatically locks out for 30 seconds. If you enter incorrect passwords for the second time three consecutive times, the system automatically locks out for 5 minutes. Keyboard input is prohibited, and the buzzer sounds "drip drip".

Factory Reset: Press the reset button for 5 second.


Users can refer to the following suggestions:

- 1) It is recommended that each user register 2-3.
 - 2) It is recommended that women and children register their thumbs and middle fingers as far as.
 - 3) Press the strength of the finger as much as possible. If the force is too heavy or too light, it is recommended to press the finger with a light force.
 - 4) It is recommended to register fingerprints from multiple sources.
 - 5) In the selection of battery, it is recommended to use high-quality ones.
- High- performance alkaline battery, do not use inferior or counterfeit battery, and do not use any carbon battery.

Undervoltage alarm function:




The system automatically checks the battery voltage at every opening. If the battery voltage is lower than $6.3V \pm 0.2V$, the red indicator lights up, indicating that the battery needs to be replaced as soon as possible.

- 1) Spoke handle
- 2) Reset button
- 3) Shooting bolts
- 4) Mounting hole
- 5) Battery

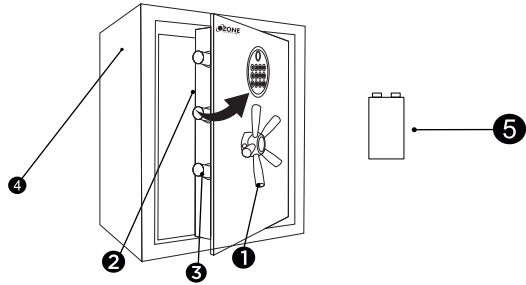

INSTALLING THE SAFE

- Check the type of location where the safe will be installed (wood, concrete, tiles)
- Get the appropriate anchors for the type of location
- Check location on floor for concealed wires or pipes
- Mark the location to drill for your anchor
- Drill the appropriate size hole for the anchors you have
- Mount the safe, making sure it is secure
- **Do not** mount to a shelf in a cabinet or closet without anchoring to wall behind the safe

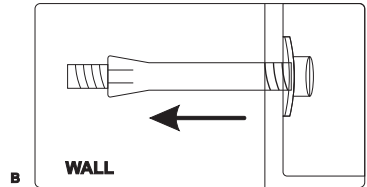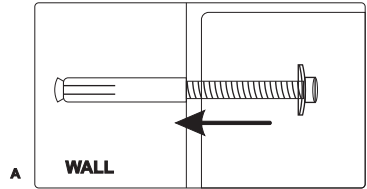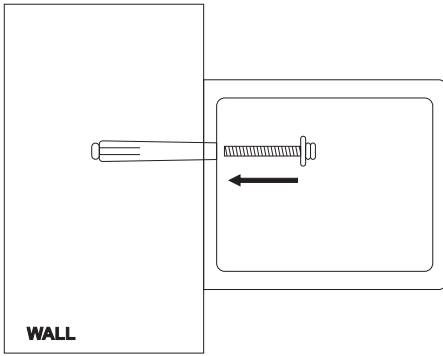

Do's	Don'ts
1) Check the area before installing the safe	1) Do not install the safe in moiser area
2) While installing the battery, make sure all the battery are new and are of branded company.	2) While installing new battery, make sure old and new battery are not mixed
3) Keep the emergency key in a secured place	3) Do not keep the emergency key inside the Safe





OZONE DIGITAL SAFE- CHECK LIST

MODEL NO.: _____ **SERIAL NO.:** _____

DATE: _____ **DATE OF DELIVERY:** _____

CONTENTS:-

- | | |
|--------------------------|--------------------------|
| 1. EMERGENCY KEY | ☐ |
| 2. PANEL KEY | ☐ |
| 3. DRAWER KEY | ☐ |
| 4. BATTERIES | ☐ |
| 5. ADAPTOR | ☐ |
| 6. RFID CARD | ☐ |
| 7. FASTNER | ☐ |
| 8. MANUAL | ☐ |
| 9. OPERATION CHECK | ☐ |
| 10. BODY DAMAGE (IF ANY) | ☐ |

INSPECTED BY :- _____

CUSTOMER / DEALER SIGNATURE & SEAL