


SMART DIGITAL FURNITURE LOCK



OZFL-201-Life PW

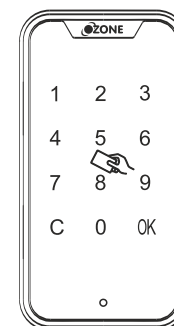

OzoLife iOS



OzoLife Android

How to set temporary user card

- ▶ Use card to close to inductive zone  , you will hear a long di sound, the green light is on, it means setting succeed , the lock will be locked automatically.

How to use temporary user card

- ▶ Use card to close to inductive zone  , you will hear a long di sound, the green light is on to unlock, pls open the door within 5 seconds to take out your belongs , now the lock is ready for others.

How to operate with APP


- ▶ 1.How to connect with lock
Turn on Bluetooth –open "Ozolife" app--press add device --press auto scan--press next to connect the smart lock,Open "Ozolife" app--press the connected smart lock to come into operation interface--tap and hold to unlock.
- ▶ 2.How to add other members by administrator
Open "Ozolife" app--press the connected smart lock to come into operation interface--press member management to add other members
- ▶ 3.How to check unlocking records
Open "Ozolife" app--press the connected smart lock to come into operation interface--press unlocking records
- ▶ 4.How to add other cards
Open "Ozolife" app--press the connected smart lock to come into operation interface--press settings--press card management to add management/user card
- ▶ 5.How to change user password
Open "Ozolife" app--press the connected smart lock to come into operation interface--press settings--press password management to set password ,you will hear a long di sound, the green light is on to unlock, pls open the door within 5 seconds to take out your belongs , now the lock is ready for others.

Features

- 1> Decode
When user password been forgotten, you can use management password to reset the user password, using the management password unlock succeed, user password will be changed back to original password: 1234 .
- 2> Reset to defaults
press "RST" on the back of the control panel for 3s , when you heard a long di... sound , all cards be deleted and password be changed back to factory default password.
- 3> Emergency power supply
when the battery is in low voltage condition, you can connect the USB port with an external power supply .
- 4> Auto- alarm will be activated when input wrong password 4 times and the lock will be died for 60s.
- 5> Batteries low voltage prompts: Low voltage indicator light is on, please replace the battery in time, the lock may not work when the voltage is low

Fixing hole size & installation

▼ Fixing hole size Unit: mm

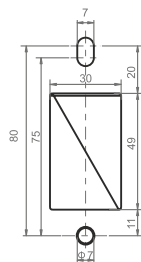

Packing List


S/N	Description	Quantity	Remark
1	Front panel lock	1	
2	Back panel lock	1	
4	Countersunk screws packet	1	
5	User installation manual	1	



Ozone Secutech Pvt. Ltd.

548, Phase V, Udyog Vihar, Gurugram, Haryana-122016, India
Visit : www.ozonesecutech.com | Email : ccsales@ozone-india.com
India Customer Care : +91-11-45576666

Brief introduction

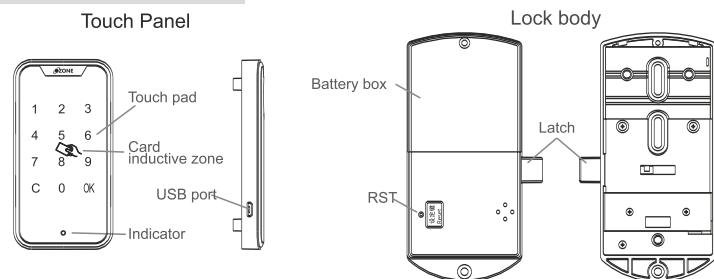

Technical parameters

Card read distance	5-10mm	Management card	3
Management password	1 (factory default management password:4321)	Guest card	17
User password	1 (factory default user password:1234)	Static current	<30uA
Working temperature	-25~+55℃	Dynamic current	<120mA
Working humidity	10%~85%RH	Power supply	4×AA batteries
Storage temperature	-40~+55℃	Batteries life time	1 year

How to operate

Lock & unlock




Input password to unlock

- 1> Input factory default user password "1234+OK ", or factory default management password "4321 +OK "
- 2> Buzzer gives out a long di... Sound, and the green indicator light is on
- 3> Lock will be opened automatically

* NOTE:

- When password is wrong alarming sound di..di..di.. 3 times
- When buzzer gives out sound di.di.di. 3 times and the green indicator light is on means low voltage.
- When using the management password unlock succeed, user password will be changed back to original password: 1234

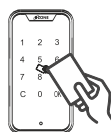

Use card to unlock

- 1> Use the verified card to unlock,
- 2> Buzzer gives out a long di... Sound, and the green indicator light is on
- 3> Lock will be opened automatically.

* NOTE: When card is unverified alarming sound di..di..di.. 3 times.

Lock

The latch will stretch out automatically after 5s.

Setting password

Change management password

- 1> Input current management password "4321 +C", buzzer gives out a long di... Sound, the green indicator light will flash

- 2> Input new management password "*****+OK ", when you heard a long di... sound means management password already been changed

* NOTE: Password can be consisted of 4-15 digits

Change user password

- 1> Input current user password "1234 +C", buzzer gives out a long di... sound, the green indicator light will flash

- 2> Input new user password, *****+OK, when you heard a long di sound means user password already been changed

* NOTE: Password can be consisted of 4-15 digits

Setting card

How to add management card

- 1> Input current management password, press "C", buzzer gives out a long di... Sound, the green indicator light will flash

- 2> Use card to close to inductive zone, buzzer gives out a long di... sound, addition succeeds, this new card will be management card, you can continue to add other card as management card (3 at most)

How to add user card

- 1> Use management card 1 time, you will hear a long di... sound and see the green indicator light is on

- 2> Use management card again, the green indicator light will flash

- 3> Take any other card to be added, when you heard a long di... sound, this new card will be user card, you can continue to add the other user card (17 at most)

How to delete single user card


- 1> Use management card 1 time, you will hear a long di... sound and see the green indicator light is on

- 2> Use management card again, you will hear a long di... sound, the green indicator light will flash

- 3> Use management card the third time, you will hear a long di... sound, the green indicator light will flash quickly

- 4> Use user card you want to delete, heard a long di... sound, deletion succeed, you can continue to delete the other user card

How to switch the mode between public mode and private mode

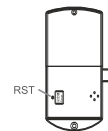

- 1> Take out the battery and then put the pin into the reset hole, at the same time equipped with the batteries.

- 2> Release the pin when you hear the long sound of di, means private mode setting succeed

- 3> Release the pin when you hear three times of long sounds di di di, means public mode settings succeed.

- 4> After switch the mode, all the cards will be deleted.

How to operate in public mode

How to set temporary user password

Input your password (4digits to 15 digits)+OK, when you hear a long di sound, it means temporary user password setting succeed, lock will be locked automatically.

* NOTE: When the lock is occupied, the green indicator light will flash every 3 seconds, the others can not use this lock.

How to use temporary user password

Input the password you have set and press OK, you will hear a long di sound, and the green light is on, pls open the door within 5 seconds to take out your belongs, now the lock is ready for others.