

OPERATING MANUAL TUSKER NXT SERIES

Tusker-10 Nxt
Tusker-11 Nxt
Tusker-33 Nxt
Tukser-77 Nxt

Color- Black



FEATURES



PASSWORD




LED DISPLAY



EMERGENCY KEY

OPERATING INSTRUCTIONS FOR TUSKER NXT SAFES

The safes come with Non-motorized locking mechanism with heavy duty locking bolts and laser cut door with steel body for protection against all attacks/ theft.

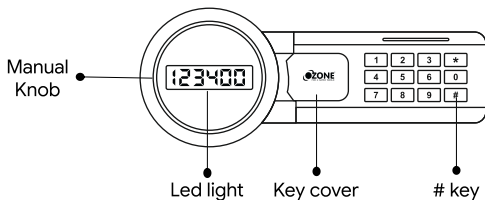

Accessories include:

- 1) 2 keys
- 2) 4 fastener
- 3) 4x1.5 voltage aa batteries
- 4) floor carpet
- 5) warranty card

specifications:


Model	External Size (HxWxD)mm	Weight (Kg.)	Volume (Ltr.)
Tusker-10 Nxt	200x350x200	5.9	9.2
Tusker-11 Nxt	250x350x250	9.5	16
Tusker-33 Nxt	250X455X375	12.3	35
Tusker-77 Nxt	650x440x405	34.7	95.4

Note: 1) Kindly change the user and master password before operating the digital safe
2) Please do not keep the emergency keys inside the safe!.

HOW TO OPEN A SAFE FOR THE FIRST TIME


1. Open the safe using the emergency key

Step 1

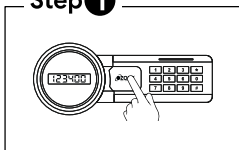


Open the key cover

Step 2

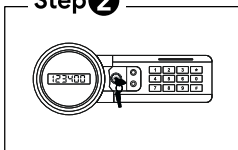

Insert the emergency key into the key hole


Step 3

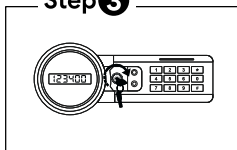

Rotate the key anti-clockwise & knob clockwise to open the safe


2. By using external battery adapter

Step 1

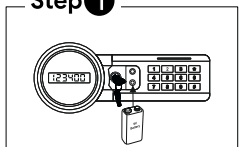


Insert the 9v battery into the jack

Step 2

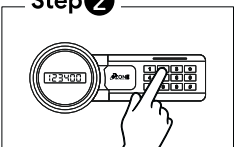

Enter your password (1234) press “#”

Step 3

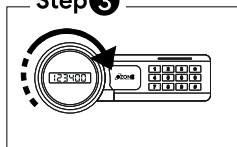


Rotate the knob clockwise & open the safe

INSTALLING THE BATTERIES

Open the safe door, remove the battery case cover and insert new aa batteries (4x1.5v) according to ‘+’ ‘-’ polarity.

Low battery indication - If the red indication blinks in that condition we need to change the batteries.

Note: In case if the battery drains, replace all the existing batteries with new ones.

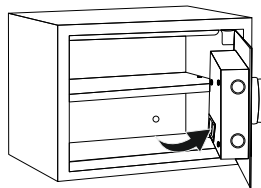

HOW TO CHANGE THE USER PASSWORD

Existing user password is (1234).

A) The safe door must be in open position.

B) Press the reset button (given inside of the door), the buzzer will beep twice.

C) Enter your new user password (3-8 digits) and press “#” button to confirm, the buzzer will beep twice, now the user password has been changed successfully

HOW TO CHANGE THE MASTER PASSWORD


The existing master password is (123456).

A) The safe door must be in the open position,


B) Press “0” twice then press the reset button (given inside of the door), the buzzer will beep twice.

C) Enter your new master password (3-8 digits) and press the “#” button to confirm, the buzzer will beep twice, now the master password has been changed successfully

TO LOCK THE SAFE

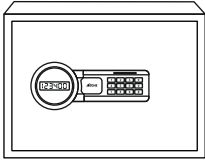


Close the door

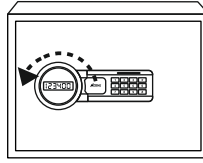


Rotate the knob anti-clockwise and close the safe


TO OPEN THE SAFE

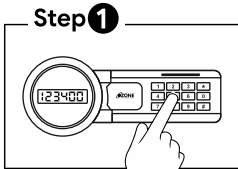

Enter your 3-8 digits password

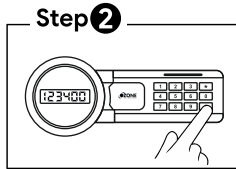


Press “#” button

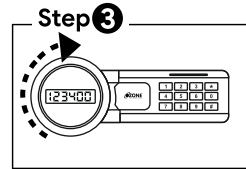




Rotate the knob clockwise and open the safe

1. Shooting bolts
2. Reset button
3. Battery box
4. Anchoring hole
5. Batteries

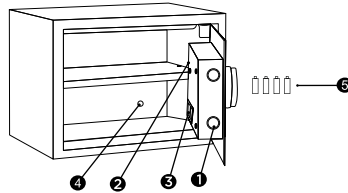

INSTALLING THE SAFE

- Check the type of location where the safe will be installed (wood, concrete, tiles)
- Get the appropriate anchors for the type of location
- Check location on floor for concealed wires or pipes
- Mark the location to drill for your anchor
- Drill the appropriate size hole for the anchors you have
- Mount the safe, making sure it is secure
- **DO NOT** mount to a shelf in a cabinet or closet without anchoring to wall behind the safe

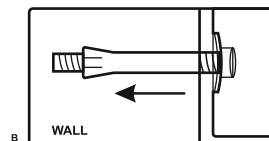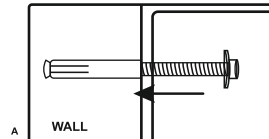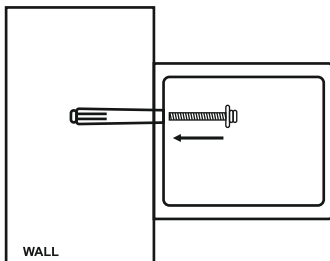

Do's	Don'ts
1) Check the area before installing the safe	1) Do not install the safe in moist area
2) While installing the battery, make sure all the batteries are new and are of branded company.	2) While installing new batteries, make sure old and new batteries are not mixed
3) Keep the emergency key in a secured place	3) Do not keep the emergency key inside the safe

CHECKLIST

MODEL NO.: _____ **SERIAL NO.:** _____

DATE: _____ **DATE OF DELIVERY:** _____

CONTENTS:-

- | | |
|--------------------------|--------------------------|
| 1. EMERGENCY KEY | ☐ |
| 2. PANEL KEY | ☐ |
| 3. DRAWER KEY | ☐ |
| 4. BATTERIES | ☐ |
| 5. ADAPTOR | ☐ |
| 6. RFID CARD | ☐ |
| 7. FASTENER | ☐ |
| 8. MANUAL | ☐ |
| 9. OPERATION CHECK | ☐ |
| 10. BODY DAMAGE (IF ANY) | ☐ |

INSPECTED BY :- _____

CUSTOMER / DEALER SIGNATURE & SEAL

E-Mail : Info@ozone-india.com | Website: www.ozone-india.com
Customer Care: 9310012300