


OPERATING MANUAL  
CASTLE SERIES

Castle-20  
Castle-30

Color- Black

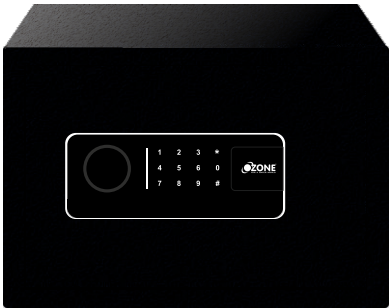

FEATURES



PASSWORD



EMERGENCY  
KEY




AUTO  
SECURE



LOW BATTERY  
INDICATION

OPERATING INSTRUCTIONS FOR CASTLE SAFES

Ozone castle safe is designed to help you protect your valuables against theft.  
Please install the safe in a cupboard or on a wall/floor and keep the emergency key in a safe place.  
Keep the safe in a secret place for paramount security.

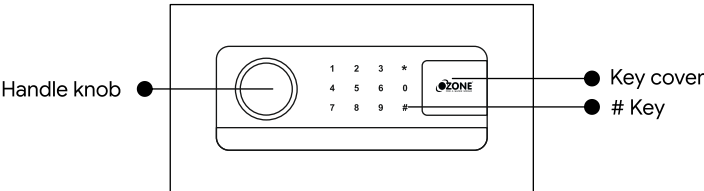

Accessories Include:

- 1) 2 Keys
- 2) 4 Fasteners
- 3) 4x1.5 Voltage AA batteries
- 4) Floor carpet
- 5) Power supply adaptor
- 6) Warranty card

Specifications:


| Model     | External Size<br>(HxWxD)mm | Weight<br>(Kg.) | Volume<br>(Ltr.) |
|-----------|----------------------------|-----------------|------------------|
| Castle-20 | 250x350x320                | 11              | 20               |
| Castle-30 | 320x400x320                | 14              | 30               |

**NOTE:** 1) Kindly change the User Password and Master password before operating the Digital Safe.  
2) Please do not keep the Emergency Keys inside the safel.

## HOW TO OPEN A SAFE FOR THE FIRST TIME


### 1. Open the safe using the emergency key

#### Step ①

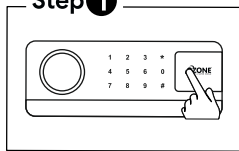


Slide the key cover  
left to right

#### Step ②

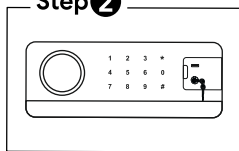

Insert the emergency  
key into the key hole and hold it


#### Step ③

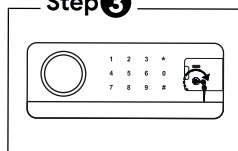

Push the knob, rotate it  
clockwise and open the safe


### 2. By using external battery adaptor

#### Step ①

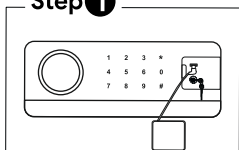

Insert the cable into the jack

#### Step ②

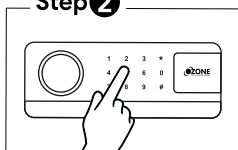


Enter the password, push the knob,  
rotate it clockwise and open the safe

## INSTALLING THE BATTERIES

Open the safe door, remove the battery case cover and insert new aa batteries (4x1.5v) according to '+' '-' polarity.

**Low battery indication** - if the red indication blinks in that condition we need to change the batteries.

**Note:** In case if the battery drains, please replace all the existing batteries with the new ones.

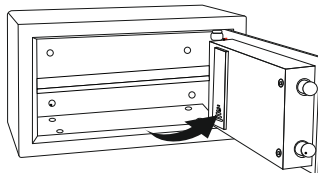

## HOW TO CHANGE THE USER PASSWORD

Existing password is (1234).

The safe door must be in open position,

Press the "reset" button given behind the door.

Enter your new password (4-8 digits) and press "#" button,

The green light will flash, which means the user password has been changed successfully.

## HOW TO CHANGE THE MASTER PASSWORD

Existing master password is (123456).

Safe door must be in open position,

Press “#” button enter “0” twice then press reset button given behind the door.

Enter your new master password (4-8 digits) and press “#” button,

The green light will flash, which means the master password has been changed successfully.

## RESET THE PASSWORD

Long press the reset button for 5 seconds and you will hear the buzzer sound (beep) and your password is reset.

## LOCK THE SAFE




Close the door  
and hold it



Rotate the knob  
anticlockwise and close  
the safe

## OPEN THE SAFE

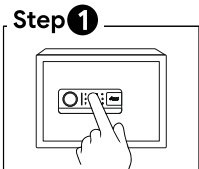

Enter the 4-8 digit  
password followed by # key



Rotate the Knob  
clockwise and open the safe

## EXTRA FEATURES


**Vibration alarm function:** In standby mode, press \* key, the alarm function will be activated. The alarm will be released, until correct password is entered.

**Undervoltage alarm locking function:** When the voltage is lower than 4.8V (+/-0.2V), the red light is on after unlocking, reminding the user to replace the batteries as soon as possible.

**Mute function:** Press “00 \*” to start the silence mode and mute any operation. press “66\*” to restore normal sound.



**Alarm function:** Enter the wrong password for 3 times the alarm for about 20 second.

1. Shooting bolts
2. Reset button
3. Battery box
4. Anchoring hole
5. Batteries

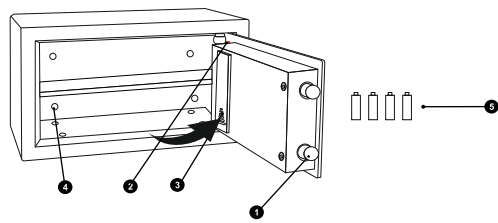

## INSTALLING THE SAFE

- Check the type of location where the safe will be installed (wood, concrete, tiles)
- Get the appropriate anchors for the type of location
- Check location on floor for concealed wires or pipes
- Mark the location to drill for your anchor
- Drill the appropriate size hole for the anchors you have
- Mount the safe, making sure it is secure
- **DO NOT** mount to a shelf in a cabinet or closet without anchoring to wall behind the safe

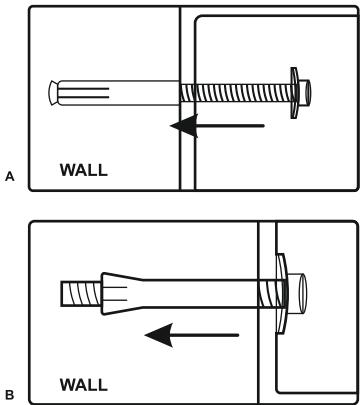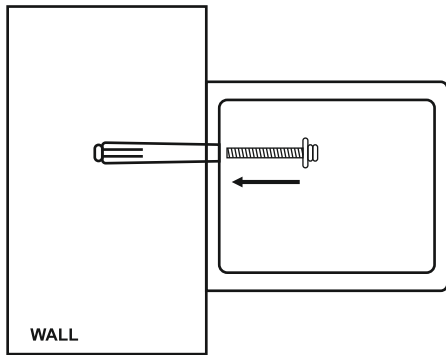

| Do's                                                                                             | Don'ts                                                                           |
|--------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------|
| 1) Check the area before installing the safe                                                     | 1) Do not install the safe in moiser area                                        |
| 2) While installing the battery, make sure all the batteries are new and are of branded company. | 2) While installing new batteries, make sure old and new batteries are not mixed |
| 3) Keep the emergency key in a secured place                                                     | 3) Do not keep the emergency key inside the safe                                 |







# CHECKLIST

---

MODEL NO.: \_\_\_\_\_ SERIAL NO.: \_\_\_\_\_

DATE: \_\_\_\_\_ DATE OF DELIVERY: \_\_\_\_\_

## CONTENTS:-

- |                          |                          |
|--------------------------|--------------------------|
| 1. EMERGENCY KEY         | <input type="checkbox"/> |
| 2. PANEL KEY             | <input type="checkbox"/> |
| 3. DRAWER KEY            | <input type="checkbox"/> |
| 4. BATTERIES             | <input type="checkbox"/> |
| 5. ADAPTOR               | <input type="checkbox"/> |
| 6. RFID CARD             | <input type="checkbox"/> |
| 7. FASTENER              | <input type="checkbox"/> |
| 8. MANUAL                | <input type="checkbox"/> |
| 9. OPERATION CHECK       | <input type="checkbox"/> |
| 10. BODY DAMAGE (IF ANY) | <input type="checkbox"/> |

---

INSPECTED BY :- \_\_\_\_\_

CUSTOMER / DEALER SIGNATURE & SEAL

**E-Mail : [Info@ozone-india.com](mailto:Info@ozone-india.com) | Website: [www.ozone-india.com](http://www.ozone-india.com)**  
**Customer Care: 9310012300**