



USER MANUAL

MORPHY LITE SERIES

OZ-FDL-01 LITE



Fingerprint



Password



RFID Card



Emergency
Key

OZ-FDL-01 LIFE LITE



OzoLife
App



Fingerprint



Password



RFID Card



Emergency
Key



OzoLife App



DOWNLOAD NOW



OzoLife iOS



OzoLife Android

SPEEDY
OZONE

WWW.OZONESECUTECH.COM

EMAIL ID: INFO@OZONESECUTECH.COM | CUSTOMER CARE: +91-9310012300

INDEX

<u>Introduction</u>	1-4
<u>Installation Layout</u>	5
<u>Operation Steps</u>	6-11
<u>Pairing Lock with App</u>	12-17
<u>FAQs</u>	18
<u>Warranty Policy</u>	19-20
<u>Warranty Card</u>	21-22

Thank you for purchasing our product. Please read through the manual before using the product. This manual contains the product warranty. Please fill up the warranty card with details, contact information, and installation data to receive the warranty.

Product features and design may change without prior notification to improve product quality.

The image contained in this manual is a reference used for description and instruction, and its types and colors may differ following the product model.

Safety cautions



Prohibited

Do not directly spray water when cleaning the product.

Water coming through into the product causes malfunction or abnormal operation.



Prohibited

Do not dismantle the product yourself. It may cause malfunction of product.

If you dismantle the product yourself, the product may not function as it should.



Caution

Do not place inflammable such as gas lighter near the product.

It may cause malfunction or abnormal operation.



Caution

Completely block holes on door after product installation.

There is a risk of intrusion through door holes.



Caution

Do not use the product at places exposed to water.

Since the product does not have water and dust proof structure, it may cause product malfunction due to short circuit.



Prohibited

Do not use the product in place with direct sunlight or high temperature.

It may cause malfunction or abnormal operation.



Prohibited

Do not install the product at place where water, snow or rain can come through.

It may cause malfunction or abnormal operation.



Prohibited

Do not impact on or alter the product.

It may cause malfunction or abnormal operation.



Caution

Replace all batteries with new one when changing batteries.

If old batteries are used with new ones, product life span cannot be guaranteed



Caution

Use alkaline battery only.

Using rechargeable battery may cause product malfunction.

Caution

Since the product is a keyless door lock, a part of the door lock may get damaged in case of malfunction. Therefore, the user needs to be familiar with the manual closing and opening of the device in an emergency.

1. Voltage: DC6V
2. Be cautious that reverse installation of batteries may cause liquid leakage or a burst.
3. When the battery is discharged, replace all batteries and DO NOT use used batteries with a new one.
4. Sensor operation temperature: 600C (+100C).

INTRODUCTION

CAUTION

Special Note Before Installation

- Necessary safety measures must be ensured before starting the installation to prevent damage to assets and personnel.
- Accuracy of the door preparation is a critical parameter for the proper door installation, Lock functioning, and security of the product.
- Any deviation from the given specs and misalignments etc., can cause performance and security breaches.
- The product images shown in this document are for reference & representation purposes only & the actual product may differ from these.
- Check for leveling & alignment of doors before installation of the product.

Do's

- Admin/Master should always be used by the primary owner of the house and can be activated or deactivated by him only.
- Always change the default factory password in the applicable models immediately after the installation is complete.
- Inserting batteries in the wrong direction or wrong polarity in the battery compartment may lead to fluid tears or ruptures, so always make sure you insert the batteries as per the correct polarity, which matches the product's polarity (+/-).
- Always keep the Master Passcode safe, and in the case of forgotten Master Passcode, please get in touch with our helpline number for further assistance.
- Always use a soft and dry cloth to clean the product.
- Replace all old batteries with a new ones when changing batteries. Using old batteries in combination with the new ones can cause the product to malfunction.
- Use Alkaline batteries only.
- Using rechargeable batteries may cause product malfunction.

Don't's

- Do not Dismantle the product by yourself. Always take the help of the certified service technician for dismantling the product as improper handling may cause damage to the product resulting in malfunctioning of it.
- Do not insert batteries with reversed polarities. Always check and ensure proper polarity of batteries in line with Product Polarity while inserting it into the product as any mismatch can result in liquid leakage or rupture.
- Do not install, disassemble or repair the product without the help of a certified service technician.
- Do not give excessive impact force on the product.
- Do not directly spray water when cleaning the product. Water coming through into the product causes malfunction or abnormal operation.
- Do not install the product in an area exposed to the external environment.
- Do not let dew condensation enter the product as it may cause product malfunction if a certain level of moisture enters into it, so make sure to remove any source of dew condensation through periodic ventilation or paper weather stripping.


User Instruction

- Please read all the safety & operating instructions before the product installation.
- To ensure continuous access security, change your PIN code regularly.
- Only use new batteries & beware of potential battery leakage, which may cause damage/malfunction to the product.
- Replace all batteries when prompted by the automatic low battery indication and do not re-use any of the batteries.
- Installation must be done by an Ozone service professional.
- Disassembly or attempted repair, rework or reverse engineering is prohibited without written consent & approval of Ozone except for the normal installation of the product by a designated service professional.
- Clean the product only with a dry microfiber cloth.
- Do not insert or press any of the buttons with Pin or sharp objects.
- This product has not been tested for external use. Avoid any contact with water.
- This product was designed for use in weather-protected outdoor and indoor areas and domestic application only.
- Do not expose the product to strong shocks or vibration.
- Keep the filled-out warranty certificate and invoice, as it is required for processing all warranty requests.
- The information in this user guide is subject to change without notice.

This product must be installed by an Ozone professional. In case of defects resulting from installation by other than an Ozone professional, the Product warranty will be void. Ozone reserves the right to charge on out-of-warranty products.

INTRODUCTION

PRODUCT LAYOUT

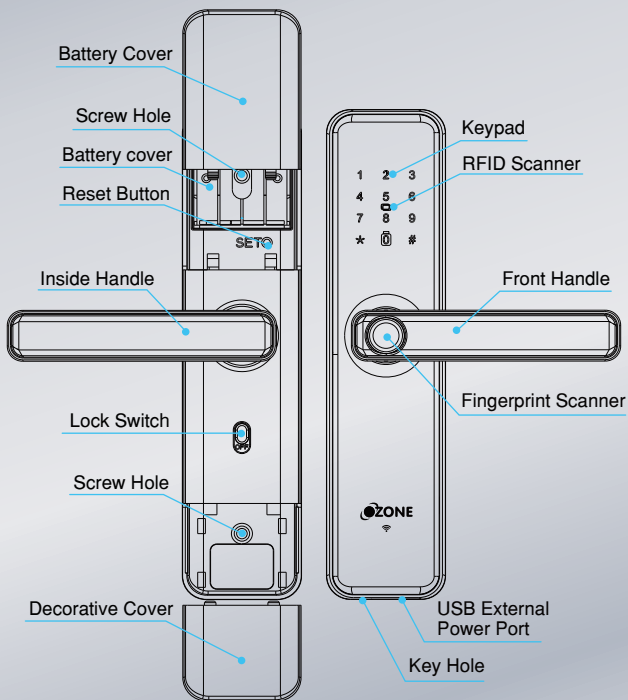

Please keep internal/external panel clean before installation.

INTRODUCTION

PRODUCT LAYOUT

Change Handle Direction

Door Open way: R

Outside Panel Accessory


Inside Panel Accessory

Fingerprint wire should always follow handle way

Handle change direction screw

The triangle arrow of clutch wheel is downward


Lock Body Change Direction

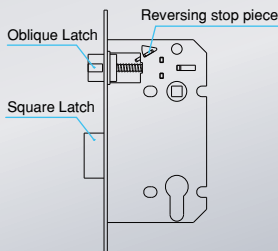

When installing the lock body, the Oblique latch should stay on top at the same time, square latch should at the bottom, oblique facing door closing way otherwise adjust it and steps as follows:

1. Take Reversing stop piece upward.
2. Push in oblique latch in and turn 180 degree.
3. Take oblique latch out.


Lock Body and Gusset plate Installation

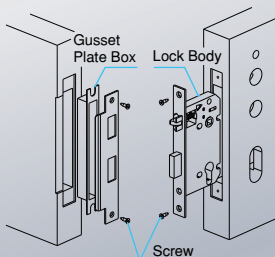

Install the door buckle plate on the door frame directly opposite the lock body. The hole of the buckle plate shall correspond to the tongue of the lock body. If there is any deviation, it must be adjusted to the appropriate position.

Use 2 screws tight lock body on frame make sure lock body and door panels parallel

INSTALLATION LAYOUT

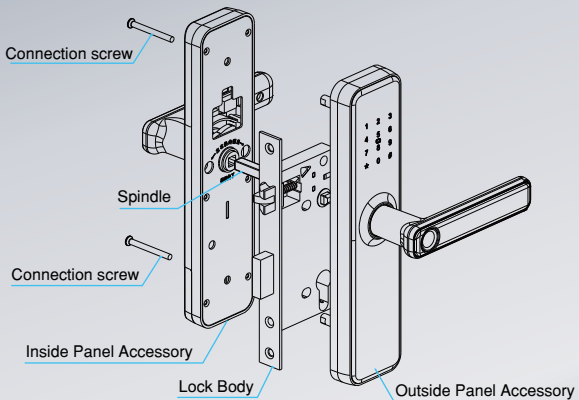

Remember: Outside panel and inside panel data line should be well connected to tighten the connection screw.


PRODUCT FEATURES

- **High-Security Emergency Key:** Ensures that you can operate the lock even if you have forgotten your Password PIN.
- **Multiple User Access:** The lock can be operated through Fingerprint, Password, RFID and an emergency key.
- **External Power Option:** External Battery Backup option available.
- **24 Months Warranty** provided by the manufacturer from the date of purchase.
- **Master** has the access to add or delete users. The lock can have 9 masters (RFID, Passwords, & Fingerprints combines). And 300 in total.
- **Low-Battery Indicator.**
- **Scramble Feature:** You can enter random passwords before and after the actual PIN, and the lock would recognize the same.


OPERATION STEPS

Please enroll the master password/card/fingerprint before you start to use this lock. You can follow the operation steps as below:

1. Initialization

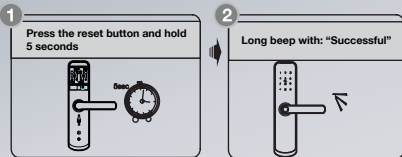


2. Enroll Master Password

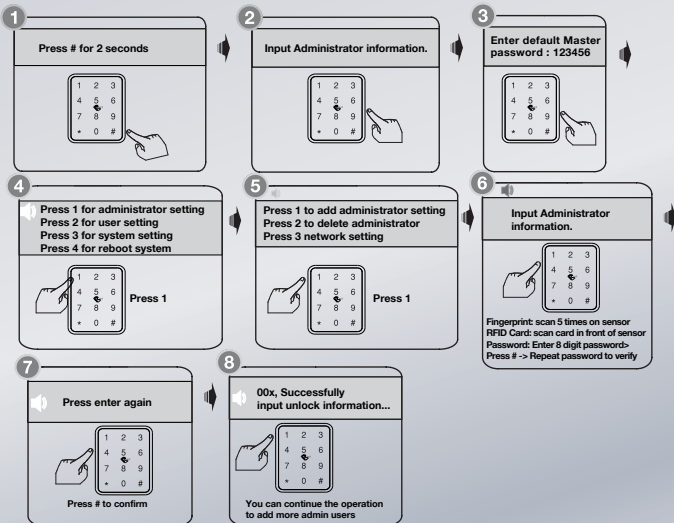


Kindly note:

- The administrator can be password/fingerprint or RFID Card. You can set it according to your requirement, and 9 administrators are allowed.
- Press # key to confirm, press * to back to the previous step and the lock will exit the setting if there is no operation for 10 seconds.
- After 5 times wrong unlock, the keypad will be locked for 30 seconds. There is no reaction to any operation during this time.


3. Delete Master Password

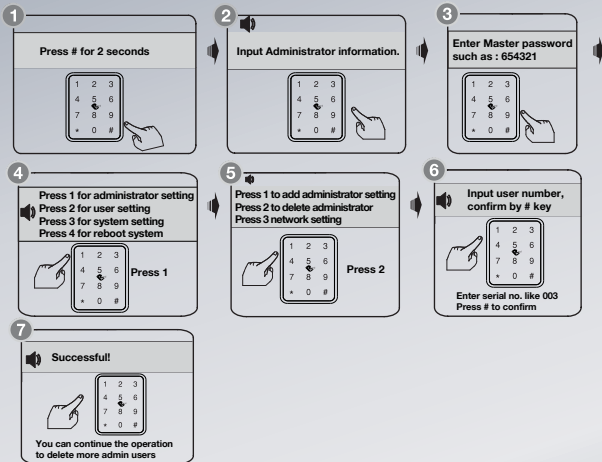


4. Enroll User Password

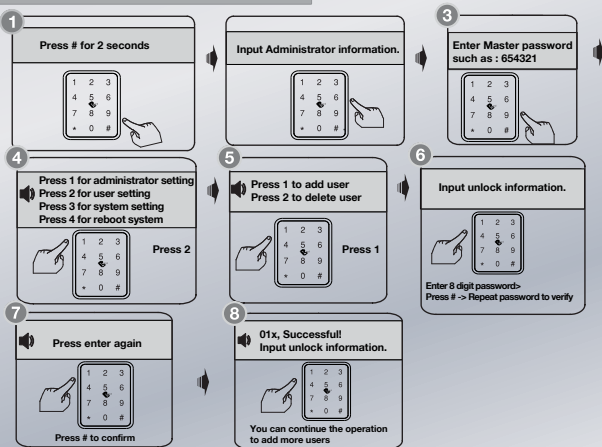


5. Delete User Password

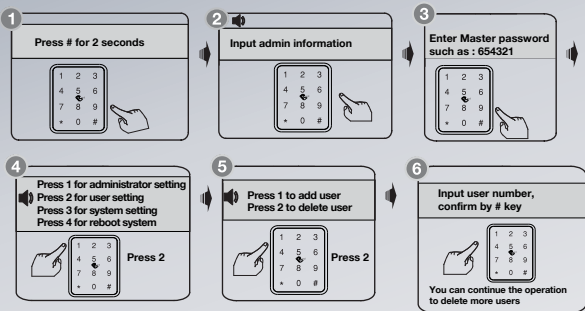


6. Enroll User Card

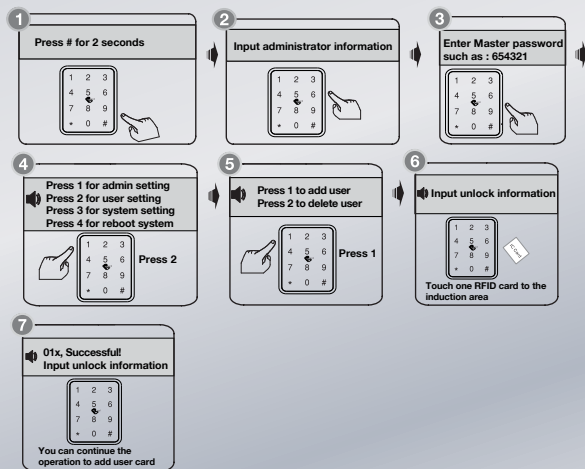

7. Delete User Card

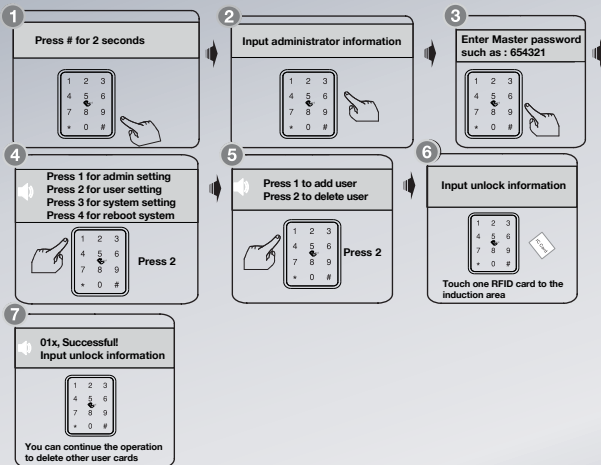

8. Enroll User Fingerprint

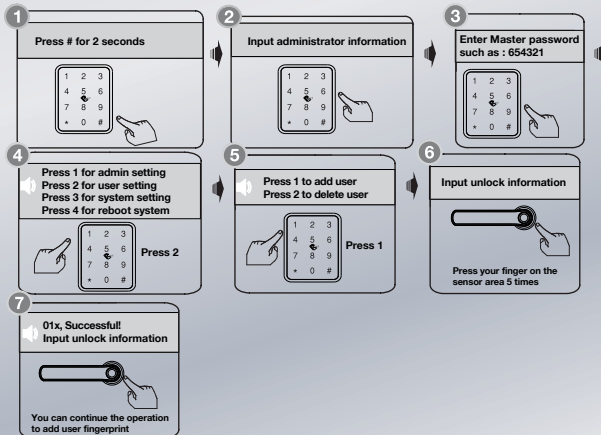

9. Delete User Fingerprint

- 1 Press # for 2 seconds

- 2 Input administrator information

- 3 Enter Master password such as : 654321

- 4 Press 1 for admin setting
Press 2 for user setting
Press 3 for system setting
Press 4 for reboot system
 Press 2
- 5 Press 1 to add user
Press 2 to delete user
 Press 2
- 6 Press 1 to delete number
Press 2 to delete all
 Press 1
- 7 Press enter number confirm by # key

You can enter the number like 010 to delete the user

OR

- Press 2 to delete all
 Press 2

10. System Setting

- 1 Press # for 2 seconds

- 2 Input administrator information


- 3 Enter Master password such as : 654321

- 4 Press 1 for admin setting
Press 2 for user setting
Press 3 for system setting
Press 4 for reboot system
 Press 3
- 5 Press 1 for time setting
Press 2 for lock no. modification
Press 3 for voice setting
Press 4 for unlock mode

- 6 Time setting: Enter new date & time in the format YYYYMMDDHHMM, Press #
Lock No.: Enter new 4 digit lock no., Press #
Voice setting: Press 4 to decrease and Press 6 to increase the volume
Unlock Mode: Press 1 for Single Unlocking Access, Press 2 for Dual or Combination Unlock, Press 3 to change Time to Unlock*

*Usual auto re-lock period is 6 Seconds after door is closed. Range is 1-9 Seconds.
(Press 2 to increase time to re-lock and Press 8 to reduce time to re-lock)

11. Reset Setting

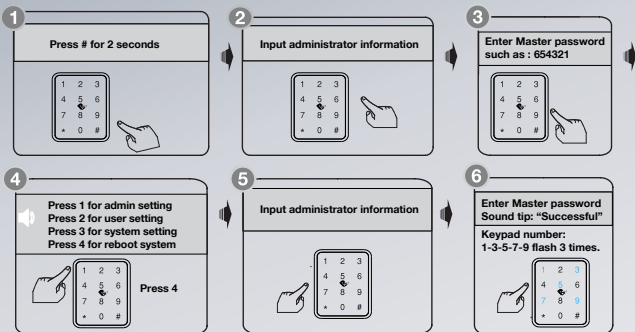

Kindly Note: Above are the standard operation for the lock with password and keycard function.


PAIRING LOCK WITH APP

1 Add administrator in lock (skip this operation if you have done this)

2 Search "OzoLife" in the APP store to download it.

3 Register by e-mail id number then log in.

4 To Enable Wi-Fi Pairing in Lock, follow below given steps:

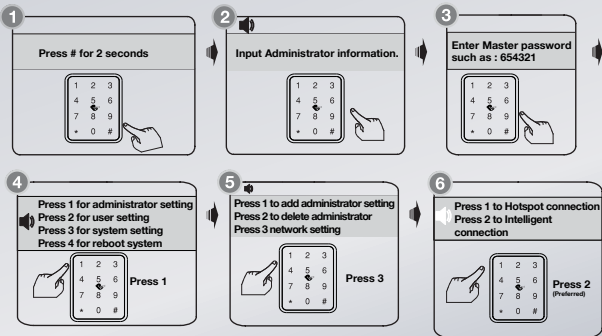


5 Continue app pairing steps based on your selection (Intelligent Mode or Hotspot Mode).

APP PAIRING - INTELLIGENT MODE

- 1 In Intelligent mode, connect your mobile phone to your home WIFI network and follow the steps as shown below:



- 1 Open OzoLife App and click Add Device.

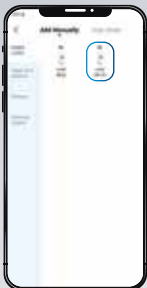

- 2 Click on the "Digital Locks" category on the left. Find the door lock (Wi-Fi).



- 3 Select EZ Mode to match WIFI password; Please be patient, it takes about 40s ~60s.



- 4 Select Home Wifi network and type Wifi password and click on "Next".



- 5 Click on "Next" button.



- 6 Device pairing process will start, it takes about 40s ~120s.



7 You can change the name of device as per requirement.


Precautions:

It is better to turn off mobile data when connecting network and use WIFI network. Kindly make sure your WIFI network connectivity is smooth and signal strength is better or above 90%.

APP PAIRING - HOTSPOT MODE



1 Open OzoLife App and click Add Device.

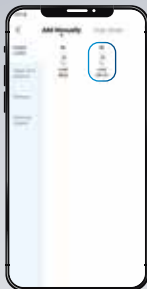

2 Click on the "Digital Locks" category on the left. Find the door lock (Wi-Fi).




3 Select AP Mode to match WIFI password; Please be patient, it takes about 40s ~60s.



4 Select Home Wifi network and type Wifi password and click on "Next".



5 Click on "Go to Connect" to view Wi-Fi connection list.

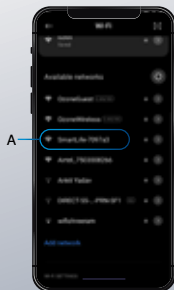


6 Select Door Lock (Wi-Fi) Hotspot connection (SmartLife-XXXXXX).

Next steps will be same as Page 15.

REMOTE UNLOCKING WITH APP

- 1** To raise remote unlock request, Press "0" when lock keypad is not enabled/backlit.

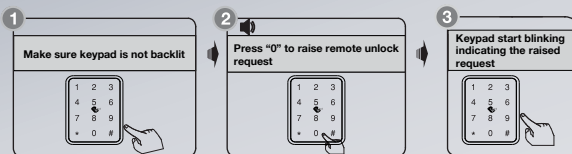

- 2** After raising remote unlock request on device, user will get a notification on mobile.
To unlock, follow below steps:



- 1** Click on "remote unlock" request notification.



- 2** The user will see "Click open remotely" on the screen. Click on highlighted section.




- 3** You will see the prompt as given above. Press "Confirm" to allow remote unlocking. Press "Cancel" to reject the request.


ADD TEMPORARY CODE



1 Click on "Temporary PW".

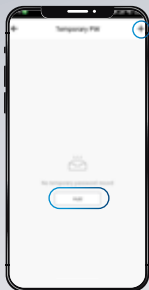

2 Click on "+" to add new temporary password.

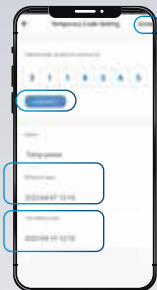

3 Type in your 7 digit password or click on "Get Randomly" to generate automatically. Type password name, effective time, failure time to set password validity. Press "Done" to save changes.

FAQs

1 How to read operation records?

Open OzoLife App, then select the Lock and enter records.

2 How to associate the app user account with the lock user number?

Open the "Record" option on the lock interface in App, select log record for User in Lock for which you want to map with App user account, click on the edit icon shown on the right side of the record, Select App user from the shown list and Click on "Save" to affect changes.

3 User is not receiving a "Remote Unlock" request on App, or there is delay in receiving it.

Make sure Lock is connected to Wifi Network, is Paired with Ozolife App, and the Internet is working. For a better experience, make sure the Wifi signals are strong, and signal strength is > -60 dBm.

4 Unable to register fingerprint.

- Check the fingers for dirt or wear. Also, check the fingerprint sensor on the lock for dirt and oil stains, etc.
 - Check if the fingerprint sensor is working correctly (Press any fingerprint on the sensor to see if there is any response).
-

5 Why is the smart lock consuming power faster than usual?

- Large standby power consumption.
 - Short circuit.
-

6 After how many incorrect password attempts will the lock go into the auto-secure mode? For how long will it be in auto-secure mode?

Every time you enter a wrong password more than 5 times in a row, the keypad is locked for 90 seconds.

WARRANTY POLICY

BY USING OZONE PRODUCT YOU ARE AGREEING TO BE BOUND BY THE TERMS OF THE OZONE (2) YEAR LIMITED WARRANTY ("WARRANTY") AS SET OUT BELOW

Ozone Secutech Pvt. Ltd. the "Warrantor" extends the following Limited Warranty to the Purchaser of this Product for a period of 2 Years commencing on the date of Purchase from the Company or its authorized dealer.

Ozone warrants to the Purchaser that the products manufactured by it are free from any defects in Material or Workmanship. If, after initial installation, any of the parts should become defective, the Warrantor will repair or replace the product, at its own discretion, in accordance with this Limited Warranty. This Limited Warranty shall apply only when the lockset is properly installed in accordance with local codes, ordinances and regulations, the printed instructions provided with it.

This Limited Warranty and Remedies set forth, to the extent permissible by law, are exclusive and in lieu of all/any other warranties, remedies and conditions, whether written or Oral, Express or implied, provided by the Company.

TERMS & CONDITIONS

- This warranty is applicable from the date of purchase on the original invoice.
- Surface Finish/shade of the Product are not covered under this warranty.
- Replaced Parts/Products shall be the sole Property of the Company.
- In case of a product that requires Installation, Damage to the Product on Non-Operation of Product due to effect of weather are not covered under this Warranty.
- Any tempering with the Product by combining with products/parts of other Manufacturers shall render the Warranty invalid.
- This warranty excludes every condition/liability not expressly set out here in.
- Ozone may restrict warranty service for product to the country where Ozone or its Authorized Distributors originally sold the device.
- No Ozone authorized seller, agent or employee is authorized to make any modification, extension or addition to this Warranty.
- If any term is held to be illegal or unenforceable, the legality or enforceability of the remaining terms shall not be affected or impaired.
- This warranty is subject to an inspection by the manufacturer to verify the claims.
- The warranty does not cover products not fully paid for.
- Decisions of the company on the admissibility of claims under the warranty would be final and binding.
- The company reserves the right to amend the terms and conditions set out in this warranty without notice.

CLAIM PROCEDURE

- The customer must present the signed and sealed warranty card together with the original invoice.
- In case of Replacement, the Original warranty card must be returned with the defective goods and the customer shall receive a fresh Warranty Card with the replacement that shall have the remaining period of warranty from date of Original Invoice.

- To avail the warranty, the customer can call the Company Helpline No: +91-9310012300.
- The customer will have to deliver the defective product to the nearest Service provider of Ozone.
- In case a technician is required to visit the place of installation, after registration of a request for Service, the prevailing price list would be applicable if the location is within the Municipal Limits of the city/town.
- In case a technician is required to visit the place of installation, after registration of a request for Service, the Company's dealer nexus, travelling and other incidental expenses shall be payable by the customer, if the location is beyond the Municipal Limits of the city/town.

DISCLAIMER/LIMITATIONS

- This limited warranty is the only warranty provided by the Company, thereby, all implied warranties including Merchantability and Fitness for a Particular Purpose are disclaimed expenses shall be payable by the customer, if the location is beyond the Municipal Limits of the city/town.
- In no event shall the company be liable for incidental or consequential damages and lost profits, considered to be arising out of product, its installation, or usage.
- The liability of Ozone is limited to the price paid for the affected Ozone product or component.
- The customer shall be completely accountable and responsible for Battery Replacement as well as keeping emergency key safe and available.
- This warranty does not cover Cosmetic Damages including breakage of Door in case of need if the Keys/Passwords are lost by the customer.
- Warranty on the product would not be applicable under the conditions that fall out of its scope, including but not limited to:
 - Misuse/Mishandling of the project due to Customer's negligence/improper installation or application.
 - Failure to follow instructions as noted in the manual or tampering/repair through unauthorized service provider.
 - Installation with unapproved accessories.
 - Cases of damage to plastic parts damage, including but not limited to scratches, dents etc.
 - Modification of the product or any alteration of any part or component thereof.
 - Cases of seepage of liquids/chemicals, Short circuit, Physical Damage, wrong/improper installation and battery drainage or any other type of intrusion.
 - Damage due to accidents like fire/robbery/self-inflicted breakage etc. resulting from incidents beyond the company's control.
 - Damage due to harsh environmental conditions like direct sunlight/humidity/vibrations etc.
 - Damage due to third party peripherals.
 - Damage due to excessive pressure or inappropriate cleaning tools/equipment.
- Damages not involving defective workmanship or materials are expressly excluded from the scope of coverage under this warranty.
- This warranty is applicable only to the first end user and is non-transferable with any subsequent resale of the product.

WARRANTY CARD



CUSTOMER DETAIL			
Name		Address	
Mobile No.			
E-Mail ID			
City		Landmark	
State		Pin Code	

PRODUCT PURCHASE DETAIL			
Digital Door Lock		Dealer Name & Address	
Model No.			
Online / Offline		Installation Address	
Serial No.			
		Invoice No.	
		Total Quantity	

Serial No.	Floor No.	Flat No.	Warranty No.	Remarks

Customer Signature:

Technician Signature:

Date:

Special Instructions: _____

- Please replace the battery as soon as the low voltage alarm indicates it.
- Read this manual carefully before installation and keep it safe for future reference.



OzoLife App



Scan QR
Code to
access
website